


# Sail Sign Mount for Elite Tent Frame

240529

## Product Parts


- 1 - Clamp with Knobs (Two Pair)  
(Two left & Two right)
- 2 - Mount Bracket

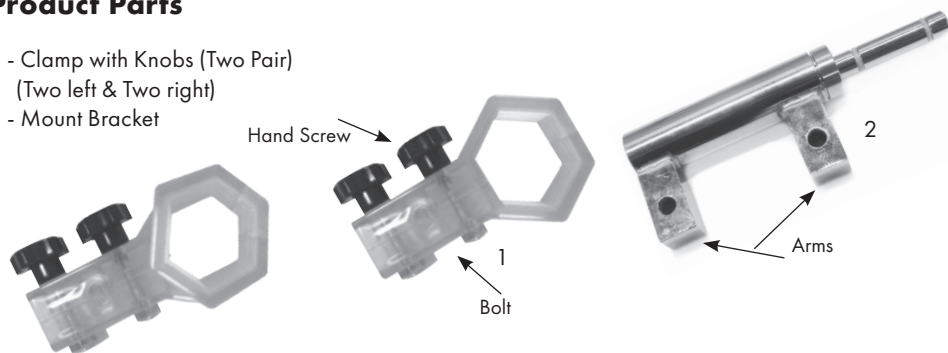

## Display Set-Up


### Step 1

Remove the Hand Screws from the Clamp (1).

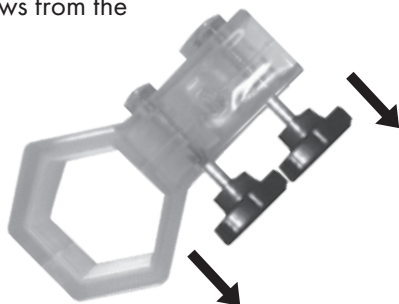

### Step 2

Position both Connectors (1) at desired height on tent leg, spaced to except the Mount Bracket (2). Push the Connector (1) forward until the tent's leg fits firmly against the back of Connector (1). Adjust as needed.

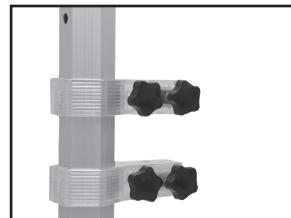


### Step 3

Insert the Mount Bracket (2) Arms into both Clamp (1) openings.

Thread the Hand Screw through the holes in both of the Mount Bracket (2) Arm and the Clamp(1).

Repeat for the other Mount Bracket(2).

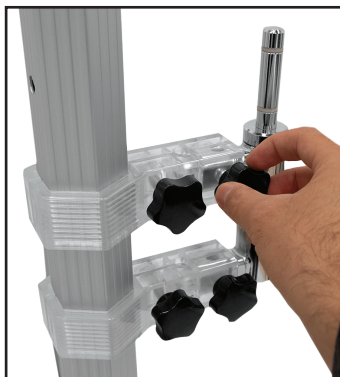

### Step 4

Place your Sail Sign's pole onto the Mount Bracket (2).

## Storage

Place all product parts into shipping box and store in a cool, dry location.

## Care

To clean, wipe with damp cloth.