 


Deluxe Geo Connecting Kit

Item #	FRAMES	FACE PLATES	CONNECTING PLATES	STRAIGHT SHELF	CONNECTING SHELF	REPLACEMENT GRAPHIC KIT	FABRIC GRAPHICS
342022	3 Qd x2	0	32	4	2	342024	(2) H (2) M
342025	3 & 9 Qd	16	32	8	2	342027	(1) J (2) M , 9 Qd Backwall
342028	6 Qd x2	16	32	4	2	342030	(2) F (2) G (2) M (2) E
342031	3 (x2) & 6 Qd	8	48	8	4	342033	(2) B (2) A (2) H (2) M (2) B
342034	3 Qd x4	0	64	8	4	342036	(12) A (24) K
342037	6 Qd x2	28	24	2	8	342039	(2) H (2) K (2) C (2) E
342040	3 Qd x3	0	48	4	4	342042	(2) H (2) J (6) M

Product Parts for HARDWARE

- 1 - Geometrix Face Plates**
- 2 - Geometrix Connecting Face Plates**
- 3 - Soft Case
- 4 - Frame
- 5 - Clear Shelf
- 6 - Clear Connecting Shelf
- 7 - Fabric Graphic

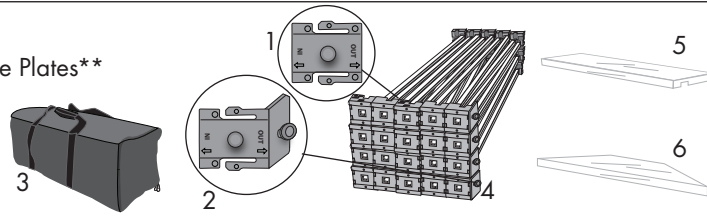

**Frames (4) should come with Face/Connecting Plates installed.

Product Parts for FABRIC GRAPHIC (skip to STEP 4)

7 - Fabric Graphics (qty varies) see page 3 & 4 for layout of graphics.



ALL PARTS COME IN THE KIT

TOP VIEWS



6 Quad Pyramid



 
 
3 Quad



6 Quad




9 Quad

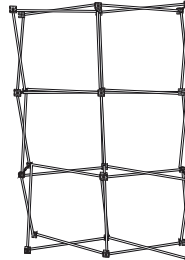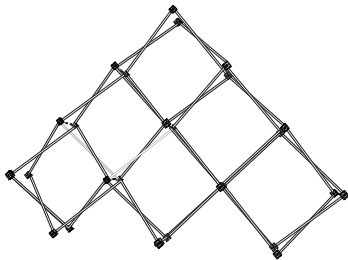

Display Set-Up


Step 1

 Remove all parts from your Soft Carry Case and boxes (3) and place on a flat, clean surface. Review the Frame (4) and notice where the pivoting light clips are located. This will determine the TOP of the display.

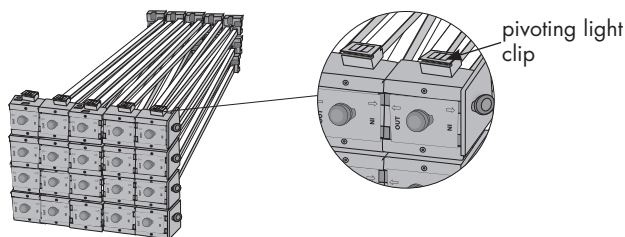

Step 2

 
Pull the Frame (4) up and out from the corners until it is fully expanded.

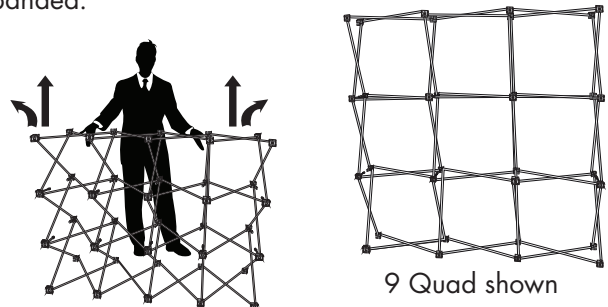


9 Quad shown

Step 3

 
Push all locking clips together to secure the Frame (4) in its expanded position.

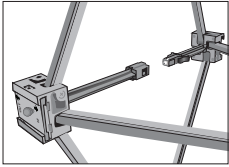

OPEN

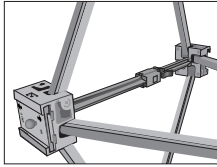 

CLOSED


 


Pressure may need to be applied to secure.

Step 5


Place the shelf (5) within the Frame (4) making sure all four notches on the shelf sides fit over the Frame (4) "scissors". Push gently down until level.

  Connecting Shelves (6) rest on the Connecting Face Plates (2) on outside of Frame

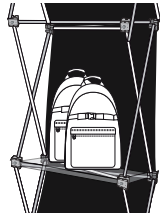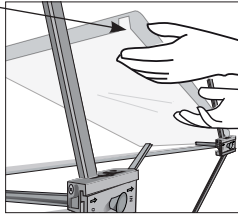

Step 4

 Attach Fabric Graphics (7) to frame by locating hole slits in each corner and securing them around the plastic pin on the face or corner plate. Repeat this step for each banner until all are secured to frame in pre-set locations (see pages 3 and 4).

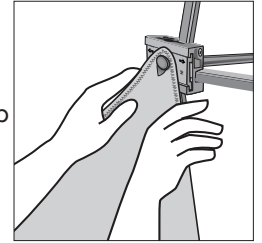


Frame Note:

TO REMOVE/REPLACE FACE PLATES:

If you need to replace or remove existing face or corner plates, find the end of the Plate that is marked "OUT". **see NOTE if you cannot indicate which end is "OUT". Push Face Plate toward the "OUT" arrow.

 You may need to tap end with force to get it to start sliding.


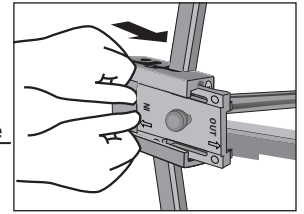


Frame Note:

** REMOVAL NOTE:

Graphic Face Plates (1) have arrows and the words "IN" and "OUT" stamped on them.

  
To Determine which end is "OUT", look at the end of the Face Plate. The "OUT" side has 2 bump outs. The "IN" side does not.

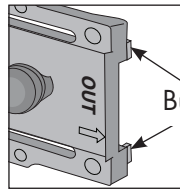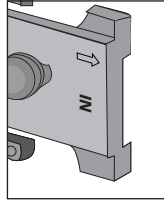

No "bump outs" indicates it is the "IN" side.

TO INSERT FACE PLATES:

 Slide (with force) the Face or corner Plates (1/2) into the hubs. Typically you will slide RIGHT to LEFT when looking at the face of the Frame.

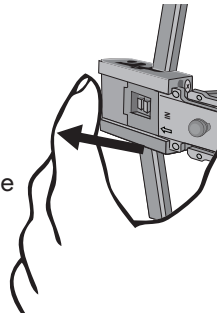


Disassembly Note:

For quick take down and future set up, you may leave graphic banners on Frame (4).


Unlock and **OPEN** all locking clips as shown in Step 3.

REMOVE ANY SHELVES Collapse Frame (4) with all Fabric Graphics (7) attached by pushing down and in on unit.

 MAKE SURE ALL LOCKING CLIPS ARE IN OPEN POSITION before collapsing Frame (4)

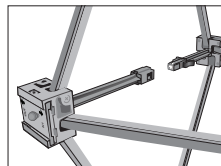

OPEN

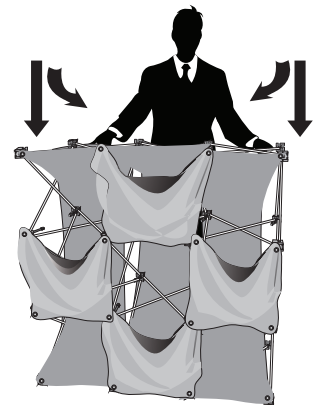 

Storage

Place Frame into Carry Case and store in a cool dry location.



Care

Machine wash Cold gentle cycle. Machine Dry, NO HEAT, Do not Dry Clean, Do not iron.

NOTE: FRAME HARDWARE HAS HUBS THAT CAN BE INTERCHANGED TO DISPLAY OTHER PRODUCTS

Conversion kits sold separately-contact client services for more details

Each Deluxe Geometrix Connector Display consists of banners that attach in a specific way to the frame.

Pin slots on banner types A-J (used to attach them to the frame) must each be placed on the front (marked with F), or the back (marked with B) to display properly.

Follow the placement requirements for your display below for the proper fit.

 
Clear Shelves - Connecting (1) and Straight (2) - are marked throughout these instructions for placement. Refer to Step 5 of this PDF for a more detailed guide on their installation.





Kit 342022 ↓

Hardware 342023, Replacement Graphic 342024

- x2 - 3 Quad Frame
- x2 - Clear Connecting Shelf
- x4 - Straight Clear Shelf
- x2 - H - Banner
- x2 - M - Banner

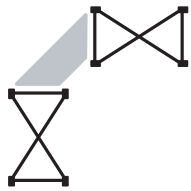


(Top View)

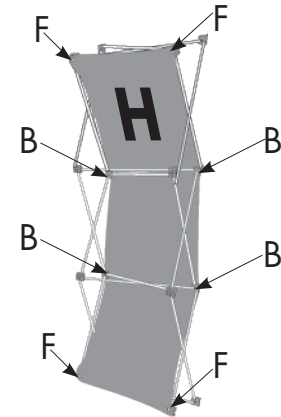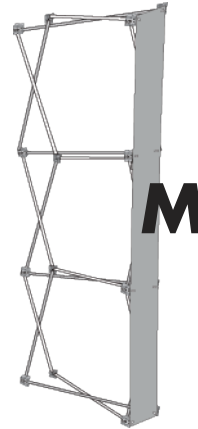  




Kit 342025 ↓

Hardware 342026, Replacement Graphic 342027

 - x1 - 3 Quad Frame
- x1 - 9 Quad Frame
- x2 - Clear Connecting Shelf
- x8 - Straight Clear Shelf
- x2 - M - Banner
- x1 - J - Banner
- x1 - Deluxe Geo Back Wall

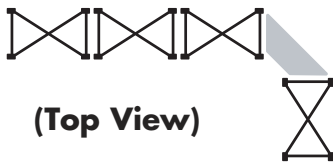

(Top View)

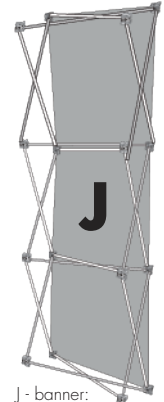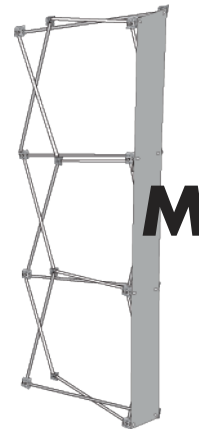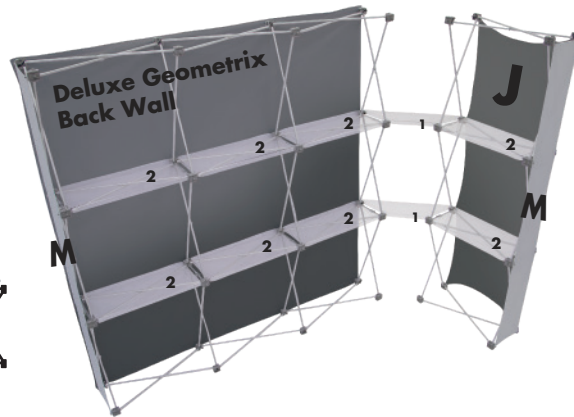   


J - banner:
All pin slots attach to the frame's BACK




Kit 342028 ↓

Hardware 342029, Replacement Graphic 342030

 
- x2 - 6 Quad Frame
- x2 - Clear Connecting Shelf
- x4 - Straight Clear Shelf
- x2 - E - Banner
- x2 - F - Banner
- x2 - G - Banner
- x2 - M - Banner

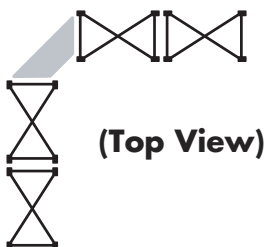


(Top View)

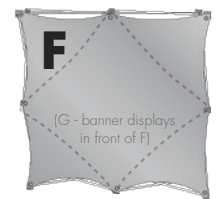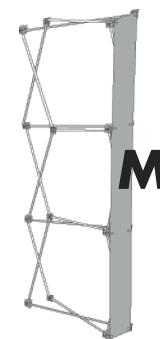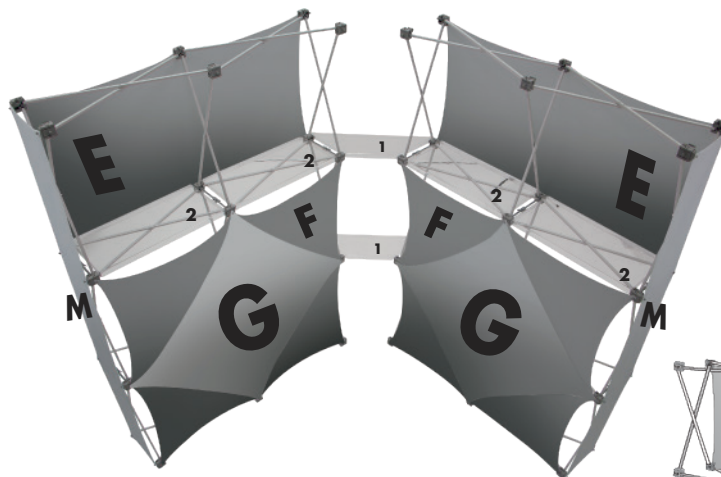   

 F - banner:
All pin slots attach to the frame's FRONT

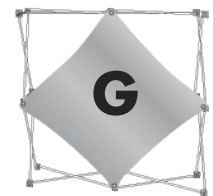

 G - banner:
All pin slots attach to the frame's FRONT

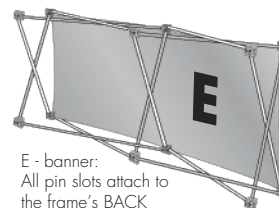

E - banner:
All pin slots attach to the frame's BACK

Each Deluxe Geometrix Connector Display consists of banners that attach in a specific way to the frame.

Pin slots on banner types A-J (used to attach them to the frame) must each be placed on the front (marked with F), or the back (marked with B) to display properly.

Follow the placement requirements for your display below for the proper fit.

 
 
 
 
 
 
 
Clear Shelves - Connecting (1) and Straight (2) - are marked throughout these instructions for placement. Refer to Step 5 of this PDF for a more detailed guide on their installation.



Kit 342031 ↓

Hardware 342032, Replacement Graphic 342033





- x2 - 3 Quad Frame
- x1 - 6 Quad Frame
- x4 - Clear Connecting Shelf
- x8 - Straight Clear Shelf
- x2 - A - Banner
- x2 - B - Banner
- x1 - E - Banner
- x2 - H - Banner
- x2 - M - Banner

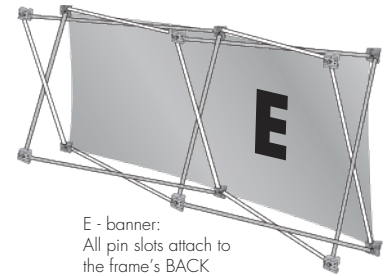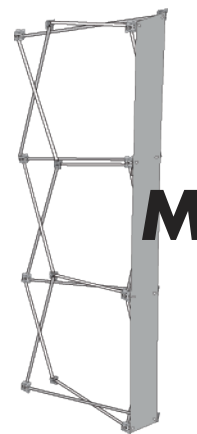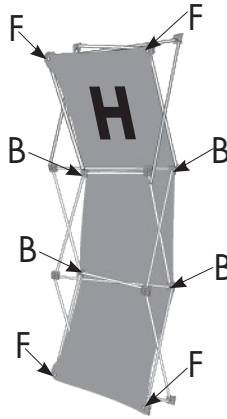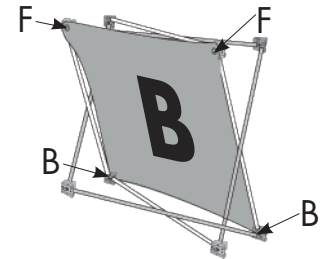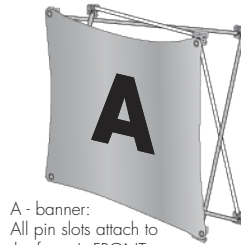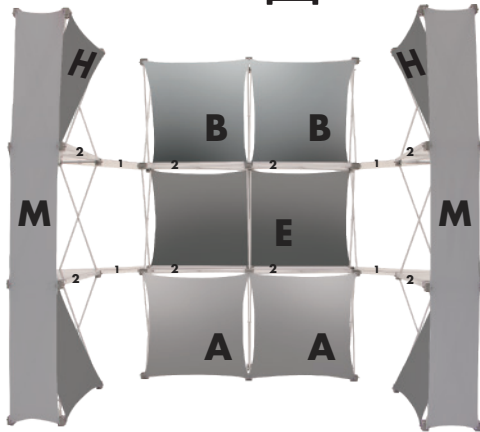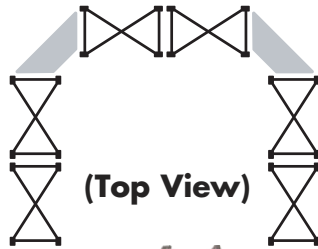

Kit 342034 ↓

Hardware 342035, Replacement Graphic 342036

    - x4 - 3 Quad Frame
- x8 - Clear Connecting Shelf
- x4 - Straight Clear Shelf
- x12 - A - Banner
- x24 - K - Banner

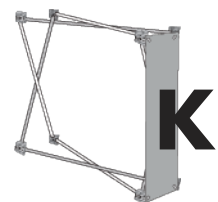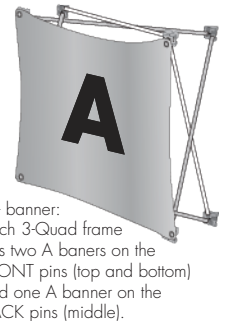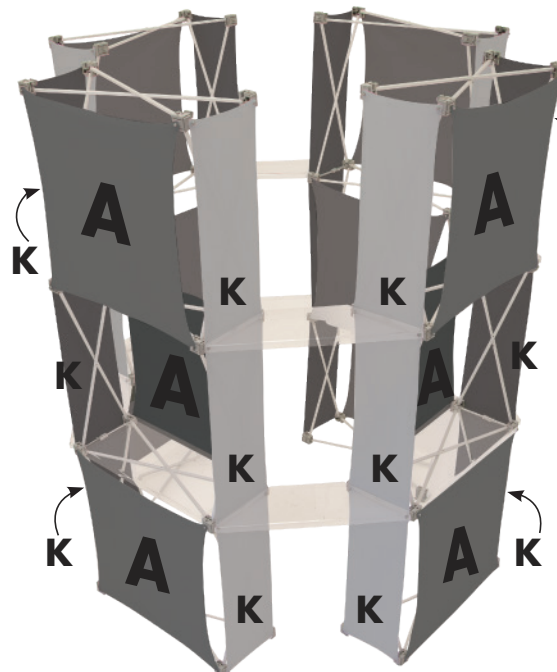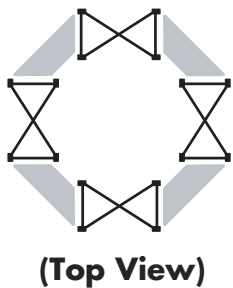

Each Deluxe Geometrix Connector Display consists of banners that attach in a specific way to the frame.

Pin slots on banner types A-J (used to attach them to the frame) must each be placed on the front (marked with F), or the back (marked with B) to display properly.

Follow the placement requirements for your display below for the proper fit.

 
 
 
Clear Shelves - Connecting (1) and Straight (2) - are marked throughout these instructions for placement. Refer to Step 5 of this PDF for a more detailed guide on their installation.




Kit 342037 ↓

Hardware 342038, Replacement Graphic 342039



- x2 - 6 Quad Frame
- x2 - Clear Connecting Shelf
- x8 - Straight Clear Shelf
- x2 - C - Banner
- x2 - E - Banner
- x2 - H - Banner
- x2 - K - Banner

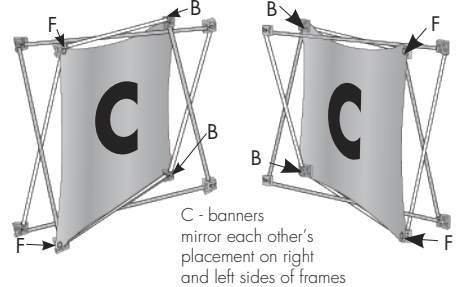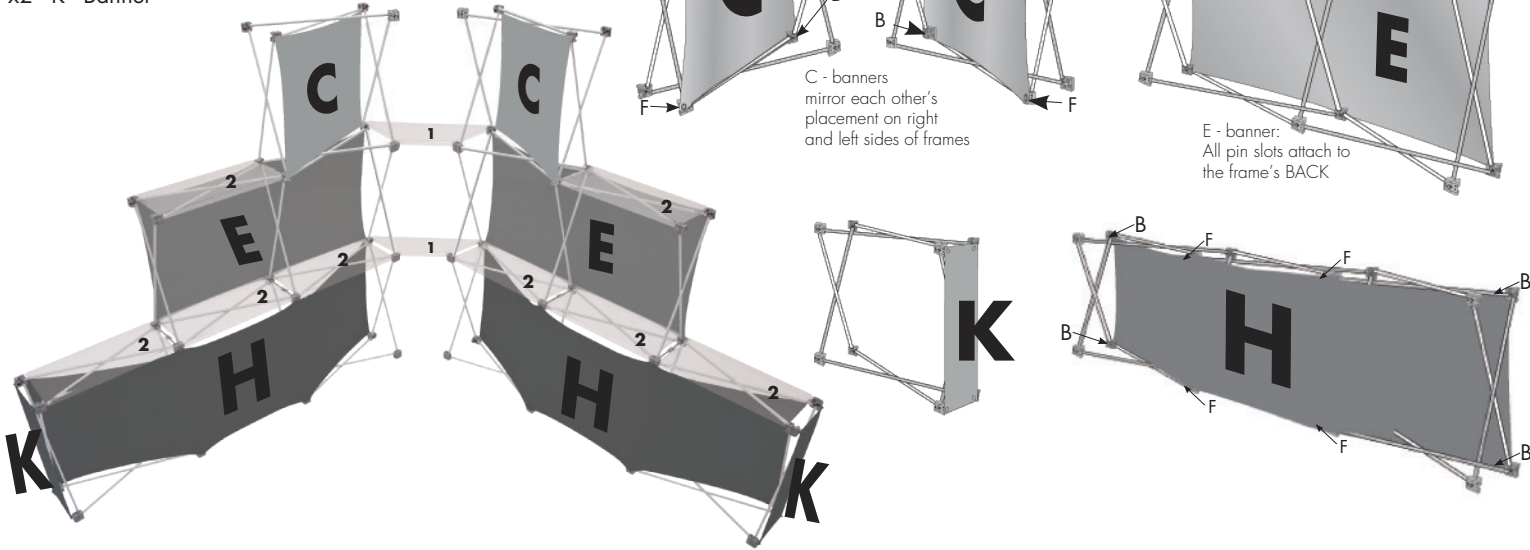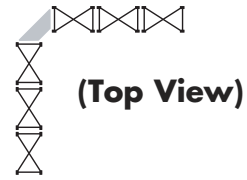

 C - banners mirror each other's placement on right and left sides of frames

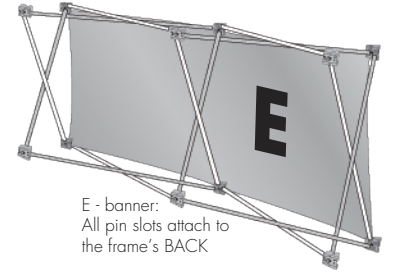



 
 
E - banner: All pin slots attach to the frame's BACK

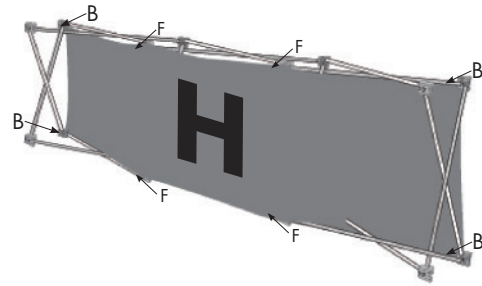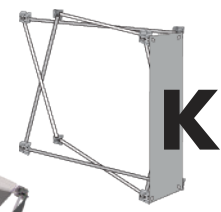

Kit 342040 ↓

Hardware 342041, Replacement Graphic 342042

    - x3 - 3 Quad Frame
- x4 - Clear Connecting Shelf
- x4 - Straight Clear Shelf
- x2 - H - Banner
- x2 - J - Banner
- x6 - M - Banner

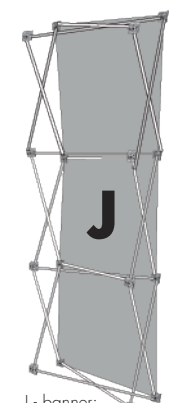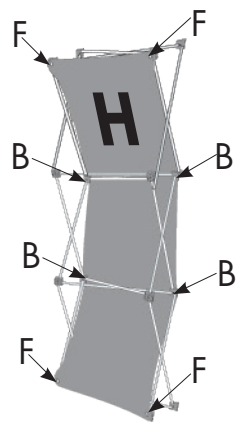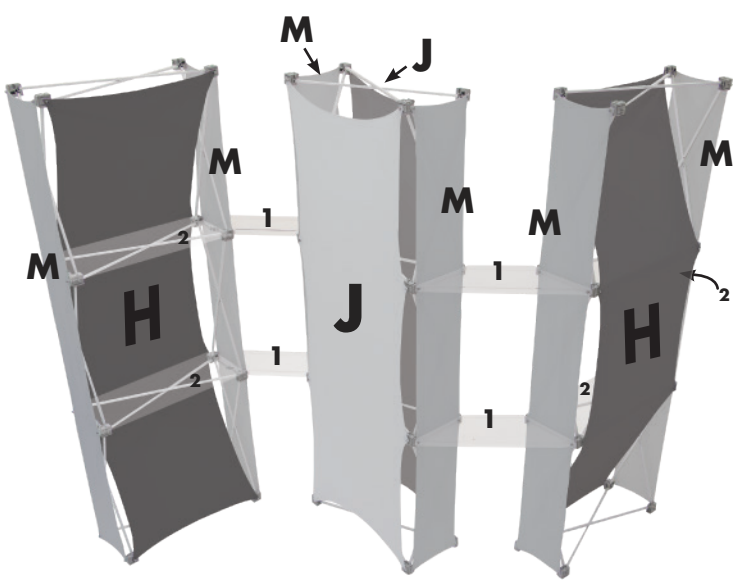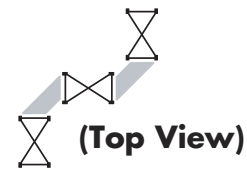

J - banner: All pin slots attach to the same side. Two banners are placed on the middle 3-Quad frame.

