

Sail Sign Ground Anchor

Product Parts

1. Sail Sign Ground Anchor



Display Set-up

Step 1

Remove the Sail Sign Ground Anchor from the box and move it along with your assembled sail sign with spike base to your desired location.

Step 2

Slide the Sail Sign Ground Anchor (1) onto your sail sign Spike.




Step 3

Stick your Sail Sign Spike with the Ground Anchor in the ground until the top of the Ground Anchor sits on top of the ground's surface (about 13.5" into the ground).



Step 4

Slip the pole of your sail sign over the pole on the Spike Base with Ground Anchor for display.

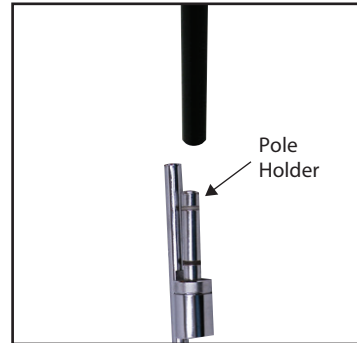

Storage & Care

Place the hardware along with sail sign in soft case and store in a cool, dry location.
**Value sail sign hardware does Not come with a soft case (Sold separately, item# 220351)
To clean, wipe with a damp cloth.

