
Half Wall Stabilizing Bar

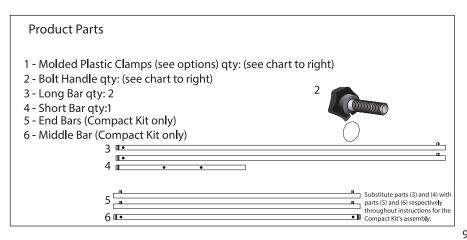

* Walls sold seperately or as kits

Clamp Options Deluxe/Standard | Premium LEFT Premium RIGHT Compact 90°Premium 90°Deluxe/Standard

* 90° Clamps sold seperately

 


Elite RIGHT Elite LEFT

Assembly

Step 1

Insert end of Long Bar (3), while pushing down the button, into one end of the Short Bar (4). Verify that the release button clicks into place. Repeat for other end. NOTE: the button will be on the underside of your stabilizing bar.



Step 2 NOTE:

Please note: The Premium and Elite tent Molded Plastic Clamps (1) are molded to ensure correct fit

around the hexagon tent leg. Verify that you have the correct Clamp on the correct tent


leg.



Step 2


On existing tent frame, place one of the Molded Plastic Clamps (1) around the leg. The open end of the Molded Plastic Clamp (1) should face towards the other tent leg you want the stabilizing bar to span. Clamp threaded inserts should face toward inside of tent***


Repeat for opposite tent leg. (See Step 2 note for Premium tent)

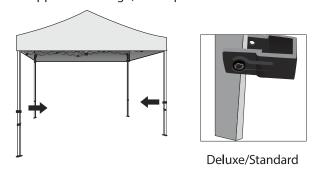

Step 3

  Insert one end of the stabilizing bar (created in Step 1) into one of the Molded Plastic Clamp (1) (If you have a tent half wall make sure to install it before you insert bar into Clamp)





half wall sold separately


9/2020 page 1 of 2


Assembly Continued

Step 4

Insert *Bolt Handle (2) through the hole on the Molded Plastic Clamp and the stabalizing bar, secure to the threaded insert on the Molded Plastic Clamp. Repeat on other leg.



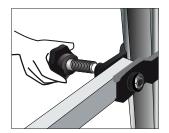

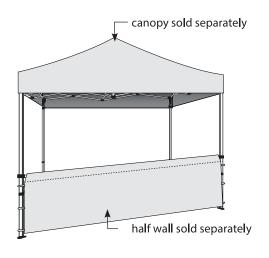

INSTALL NOTE

*** Make sure threaded insert faces toward inside of the tent.



Storage and Care

Step 1

Wipe clean with a damp cloth. Store in a cool, dry place.

page 2 of 2 9/2020