



# 10' x 10' COMPACT TENT FRAME

## Product Parts

- 1- Frame with Center Support
- 2- Soft Case with Wheels\*
- 3- Canopy\*
- 4- Stake Kit\*

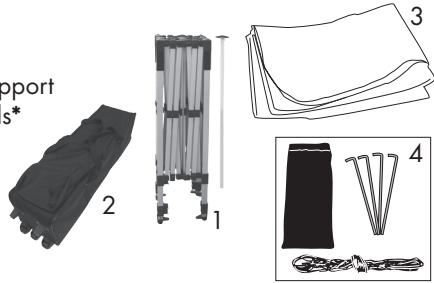

\*Only available when kit is ordered.

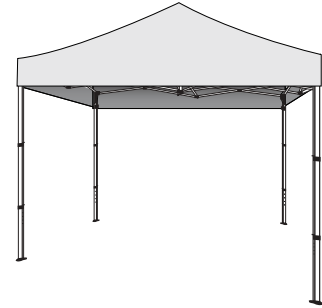


## Set-Up

### Step 1


Remove the Frame (1) from the Soft Case with Wheels\* (2) or box and place it at your desired location.

Insert Center Support Pole into opening at center of Frame (1). In tandem with another person, separate the legs of the Frame with Center Support(1) until they are extended a full arms length.

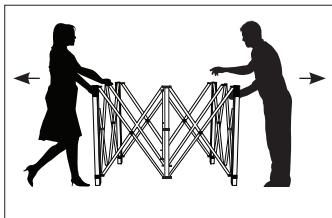


### Step 3

Attach the Canopy\* (3) by connecting the hook & loop on the Canopy\* (3) corners with the hook & loop on the four legs of the Frame (1).

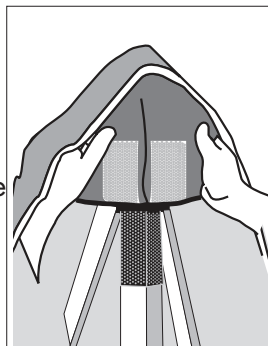

### Step 5


Working from the bottom-up and alternating sides, unlock the leg lock lever (yellow) on lowest section of leg. With leg lock connector in unlock position, lift the lower section of leg one "click" upwards. Repeat for each leg.

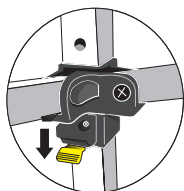

Push down lever.


### Step 2

Unfold your Canopy\* (3) and drape over the Frame (1). Position the apex of the Canopy\* (3) with the Center Support Pole of the Frame (1).

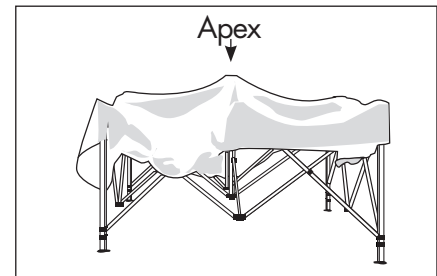

### Step 4


Stand diagonal to each other, lift and separate the legs of the Frame (1). The Frame (1) will open a little at a time so alternate position until the Frame (1) is fully extended.

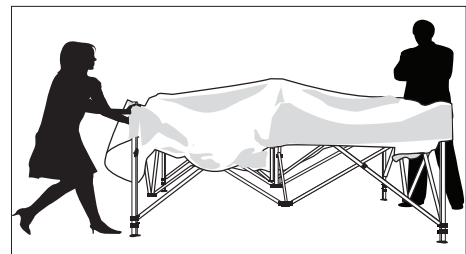

**DO NOT DRAG FRAME-THIS COULD BEND THE LEGS**

### Step 6

Place your foot on the base of the tent leg as you release and extend the middle section of telescoping leg. Repeat for each leg. **Note:** Middle section of the telescoping leg has a one click locking position.

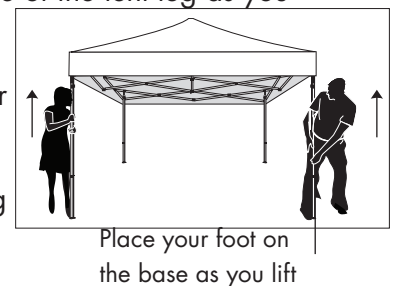

## Set-Up Continued...

### Step 7

Place your foot on the base of the tent leg as you release and extend the top section of telescoping leg. With a firm hold on the leg push up on scissor section until it "clicks" into position. Repeat for each leg.





### Step 8

Unlock the leg lock lever (yellow) on lowest section of leg to adjust to your desired height. There are five height adjustment settings. **Note:** All height adjustment settings are on the lowest leg section of the telescoping leg.




### Secure with Stakes

Secure by looping rope through the "D" ring located on each corner of the canopy.

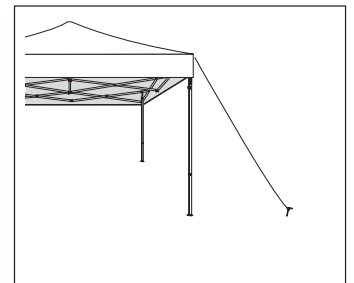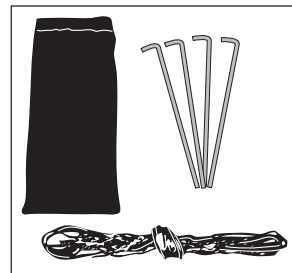

### Step 9

Lift the apex of the Canopy (3) into place by turning the crank clockwise until the Canopy (3) is taut.

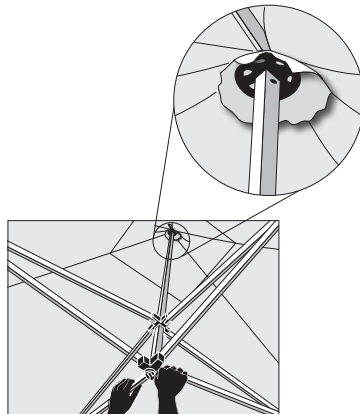

**\*FRAME MUST BE SECURED DOWN TO PREVENT WIND FROM LIFTING TENT AND CAUSING DAMAGE. NOT SECURING TENT PROPERLY VOIDS THE WARRANTY.**

## Storage

Remove Canopy\* (3) from Frame (1) and collapse. Remove Center Support Pole and store within any opening of collapsed Frame(1). Store collapsed Frame (1) in Soft Case\* with feet towards case handle.

Store in a cool dry location.  
To clean, wipe with damp cloth.



**MAKE SURE TO TAKE SPECIAL CARE TO NOT DRAG THE FRAME WHEN SETTING UP OR TAKING DOWN.**