


Scan to view Product Instructional Video or visit:
www.creativedisplaysite.com/CompactAframe.html



Product Parts

- 1 - A-Frame Unit
- 2 - Legs
- 3 - Side Hinges
- 4 - Front & Back Hinges
- 5 - Cross Bar
- 6 - Tightening Screw

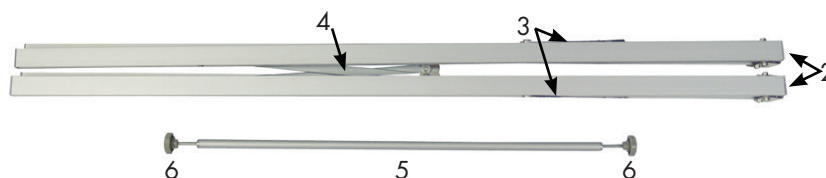

Display Set-Up

Step 1

Pull the Legs (2) out to extend the Side Hinges.



Press the Side Hinges (3) down to lock into place.



Step 2

Separate the sides, opening the Front & Back Hinges (3).

Press the Front & Back Hinges (3) down to lock into place.

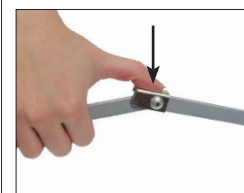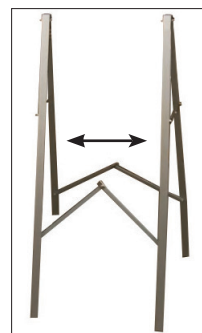

Step 3

Remove the Tightening Screws (6) from both ends of the Cross Bar (5). Line the threaded receptacle of the Cross Bar (5) to the holes on each side of the top of the frame. Insert the Tightening Screws (6) and turn clockwise to secure into place.



Step 4

Slide your graphic into the grooves on the top of the Legs (2). Repeat on other side for a second graphic.



Storage

Store in a cool dry location.

Care

To clean, wipe with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.