
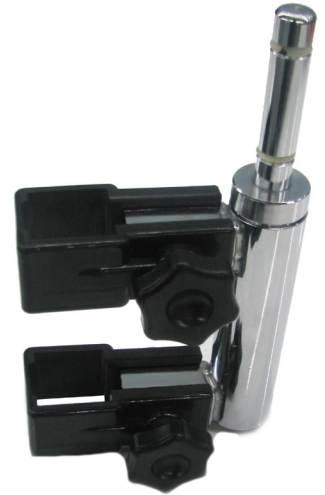


# Sail Sign Mount for Deluxe Tent Frame

240522

## Product Parts


- 1 - Connector (x2)
- 2 - Pole Holder

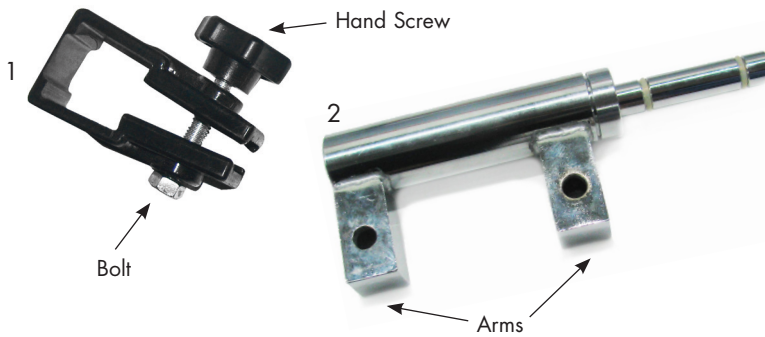

## Display Set-Up


### Step 1

Remove the Bolts from the Hand Screws and the Hand Screws from the Connectors (1).

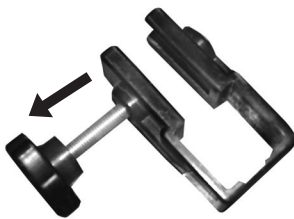

### Step 2

Position one Connector (1) at desired height on tent leg. Push the Connector (1) forward until the tent's leg fits firmly against the back of Connector (1).

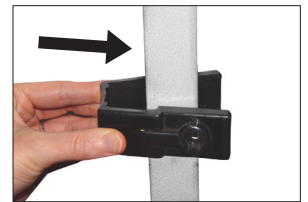

Place the second Connector (1) above the first and repeat step.



### Step 3

Insert the Pole Holder's (2) Arms into both Connector (1) openings.

Thread the Hand Screw through the holes in both the Pole Holder's (2) Arm and Connector (1). Replace the Bolt to secure.



Repeat for the other Connector (1).

### Step 4

Insert your Sail Sign's pole into the Pole Holder (2) and your Sail Sign Mount is complete!

\*Recommend for use with 7' to 15' Sail Signs only.

Not Recommended for 17'.



## Storage

Place all product parts into shipping box and store in a cool, dry location.

## Care

To clean, wipe with damp cloth.