 
 


**Product Parts**

## 1 - Hardware

- A. Front Shock-Corded Poles
- B. Back Shock-Corded Poles
- C. Stability Poles (x6)
- D. Bottom Poles (x4)
- E. Hex Wrench
- F. Bolts (x8)

 
 
 
2



## 2 - Graphic

**Hardware Assembly****Step 1**



Open all parts to the hardware and assemble the parts by matching up the symbols to the corresponding symbol illustrated in the image below.



If can't snap when dismantle the frame, PLS push the tube forwardly, then push again.

**Step 2**

Using Hex Wrench (E) and Bolts (F) connect the 4 Stability Poles (C) to the frame as illustrated below.

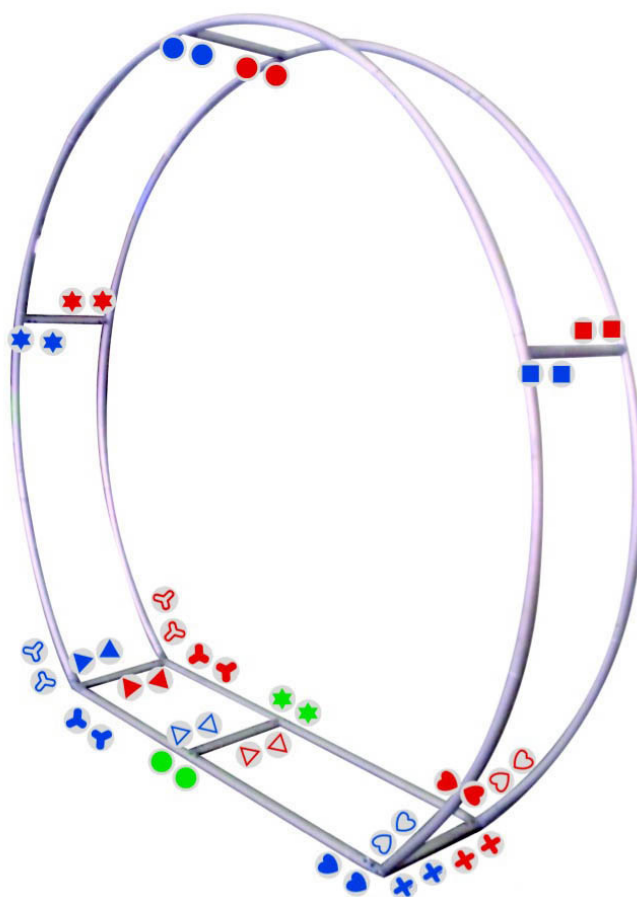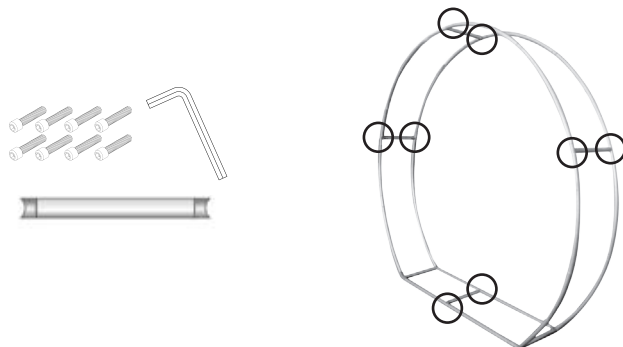**NOTE:**



Symbols represented above are for reference only and do not necessarily represent the symbols on your hardware.

## Graphic Setup

### Step 1

Lay out the opened graphic on a clean surface. locate the square bottom panel and set the hardware on top of the square bottom panel.

With two people, start to drape the front over the hardware as shown. After you drape the graphic over the front and sides of the hardware, hold the back panel up to the hardware as you zip the graphic up and around the display.

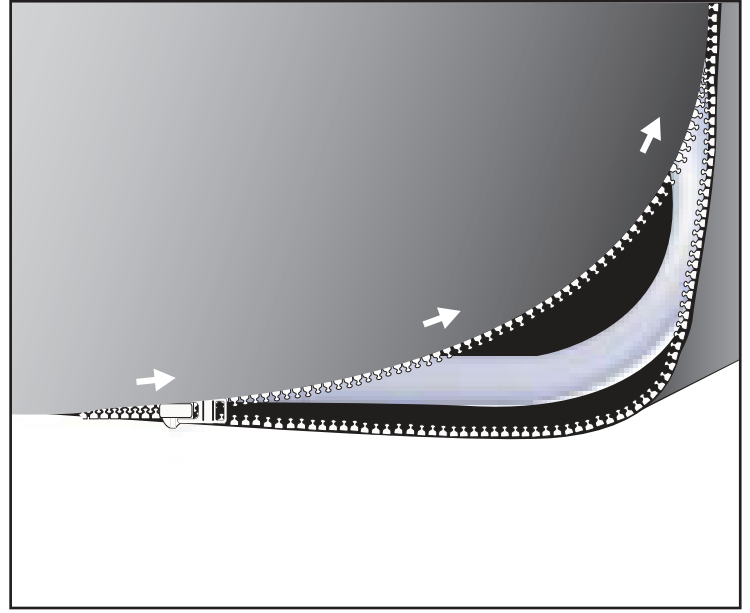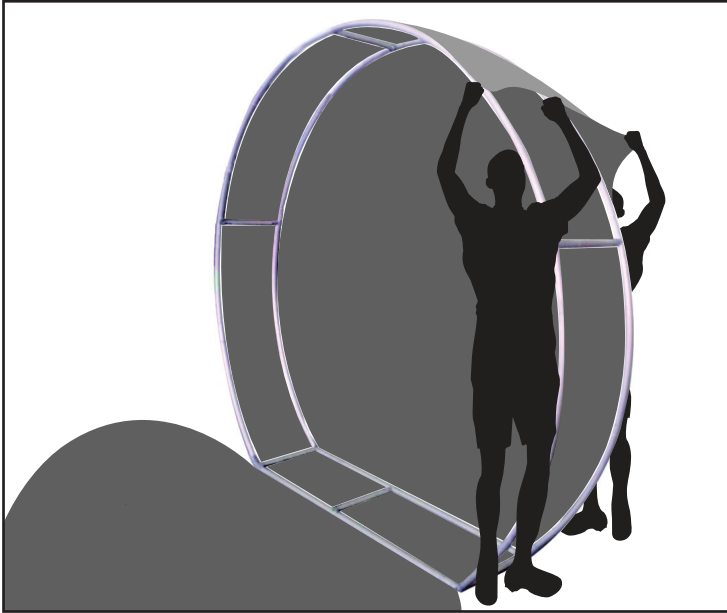

### NOTE:

*The graphic is designed to fit the hardware precisely, as a result the graphic may appear to be too tight during the installation process (this is normal).*



## Storage

Store in a cool dry location.

## Care

Machine wash cold, gentle cycle. Air Dry Only

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.