
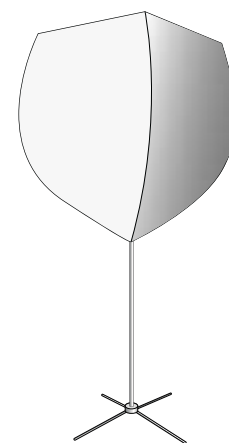


Product Parts


- 1 - Upsilon Graphic
- 2 - Base Unit
- 3 - Scissor Base

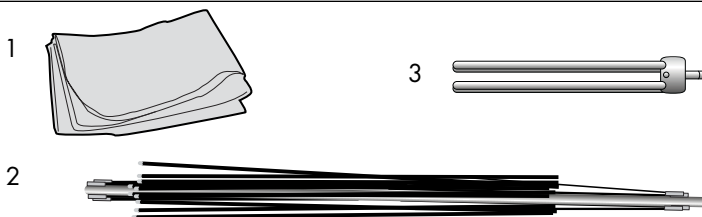

Display Set-Up


Step 1

Remove all parts from the bag and place on a clean flat surface. First start by placing the Scissor Base (3) on the floor and connecting the Base Unit (2) to the Scissor Base. Please make sure the top connector on Base Unit is fixed.

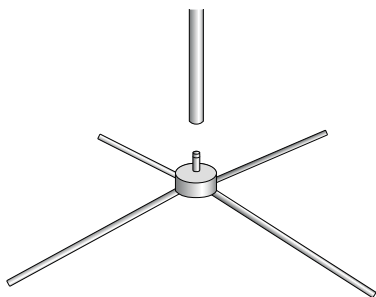


Step 3

Grab the bottom connector and lift up on it similar to an umbrella. This will create the form of the Upsilon. Once you reach the button you will need to push this in to lock the connector in place.

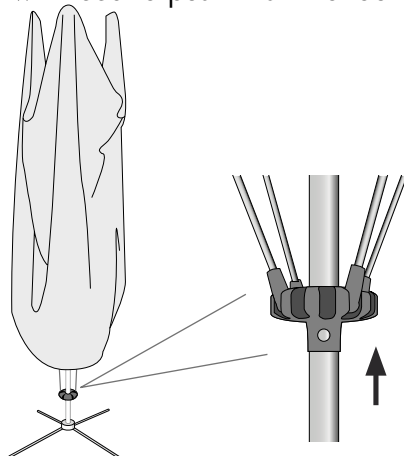


Step 2

Open up the Graphic (1) and drape it over the Base Unit (2) by sliding the graphic through the bottom hole of the banner. While doing this you will notice sleeves inside the banner. Slides the poles from the Base Unit into the sleeves.

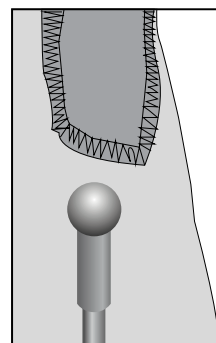

Step 4

Close the zipper and you should have a free rotating Upsilon Display!

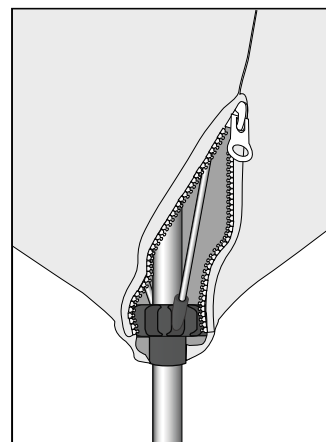

Storage

Reverse steps and place all product parts into Carry Case and store in a cool dry location.



Care

Machine wash on Cold Gentle Cycle and Air Dry Only. Never Dry Clean, but feel free to Steam Clean out wrinkles.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.