
# EuroFit Cascade Shelf Merchandiser

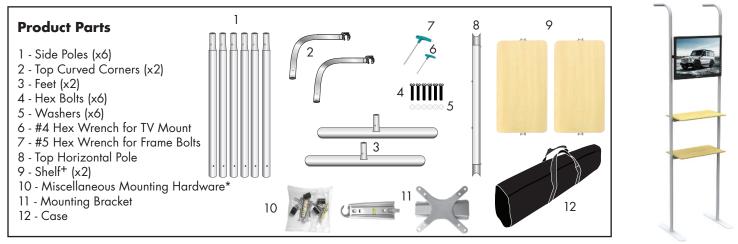

\*Use only the machine screws to secure monitor to Mounting Bracket.

+ Shelf recommended for max 5lbs.


## **Display Set-Up**

#### Step 1

Assemble hardware laying it on a flat clean surface. Do not attempt to stand or attach the hardware vertically until fully assembled. All parts are numbered for easy assembly.

#### Step 2

Fully assemble the left Side Poles (1), Feet (3), and Top Curved Corners (2). Match numbers marked on hardware. Repeat for the right side.

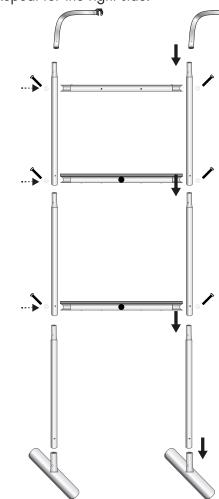

#### Step 3

Using the Hex Bolts (4) and Washers (5) attach the bottom Shelf<sup>+</sup> (9) to the frame. Hand tighten only.

#### Step 4

Using the Hex Bolts (4) and Washers (5) attach the top Shelf<sup>+</sup> (9) to the frame. Hand tighten only.

#### Step 5

Using the Hex Bolts (4) and Washers (5) attach the Top Horizontal Pole (8) to the frame, making sure the bolts are facing towards the front. Hand tighten only.

#### Step 6

Using supplied #5 Hex Wrench (7) tighten all Hex Bolts (4).

## Display Set-Up Continued ...

#### Step 7

Unscrew bolts from Top Horizontal Pole (8A) using supplied #4 Hex Wrench (6) for Mounting Bracket (11).

### Step 8

Mount bottom half of Mounting Bracket (11)) to Top Horizontal Pole (8B) with bolts just removed.






### Step 9

Slide top half of Mounting Bracket (11C) into bottom half of Mounting Bracket (11C). The tab will click when locked.

## **Mounting TV**

We recommend using a TV no larger than 23". Please follow TV/Monitor manufactures recommendation for final mounting. Top half of Mounting Bracket will attach to back of most TV/Monitors.

Illustration is for reference only.

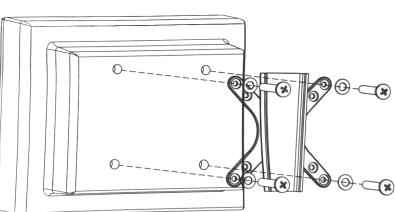

### **Storage and Care**

Place all product parts into carry case and store in a cool dry location. To clean, wipe with damp cloth.

С