


10FT GAME WALL

Product Parts

- 1 - 10ft Game Wall
- 2 - 4 Blue Game Bags
- 3 - 4 Red Game Bags

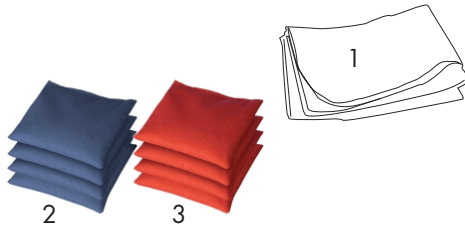


NOTE:

Game Walls are designed with zippers on the vertical ends so they can be zipped together or with other Full Walls.

Game Walls fit any 10ft Standard, Deluxe, Premium, Ultimate or Compact Tent Frame. (Fits the 10ft side of 10x15 and 10x20 Premium Frames).

(Canopy and Tent Frame Sold Separate)

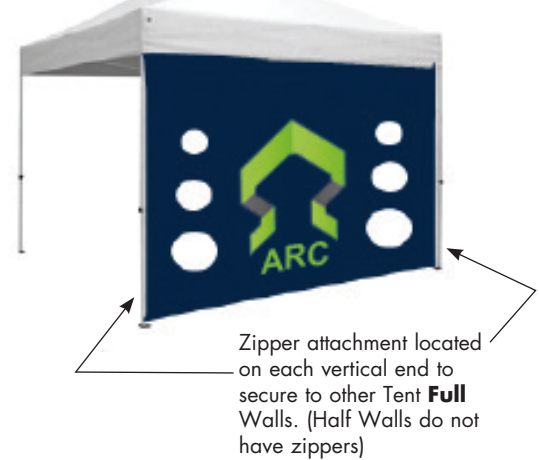


Set-Up

Step 1


Before you begin, have your existing Tent Frame legs in their lowest position.

** Game Wall(s) are easiest installed with two people.

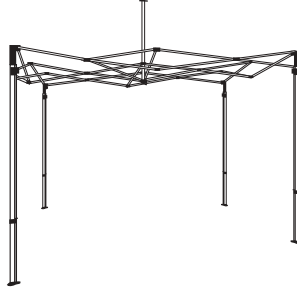


Step 3

Secure loop Velcro™ on corner of Game Wall to hook Velcro™ located on Tent Frame. Repeat for opposite corner.

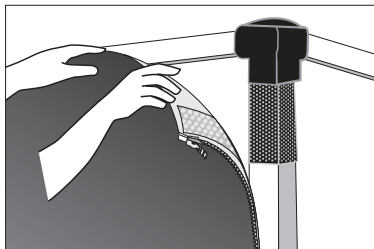

NOTE:


If canopy is in position, it will need to be pulled up at the corners to expose the hook Velcro™ on the Frame.

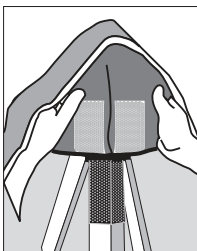

Step 2


Verify the front of the Game Wall.

NOTE Game Walls are imprinted with the front as viewed when standing outside the tent frame. The zippers are on both sides but the zipper pull will always be on the right hand side when viewing from outside the tent frame..

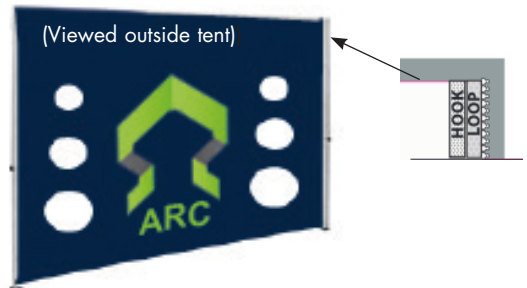

Step 4


Loop all straps around the top of the tent Frame and secure to loop Velcro™ that is sewn to the Game Wall. You may need to double wrap the strap before securing.

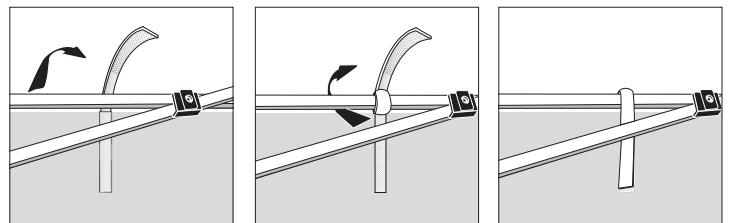

Set-Up Continued...


Step 5

For more than one Game Wall: Attach together by zipping from top to bottom. Since the tent frame is not yet extended to its full height, zip only half way down to secure.

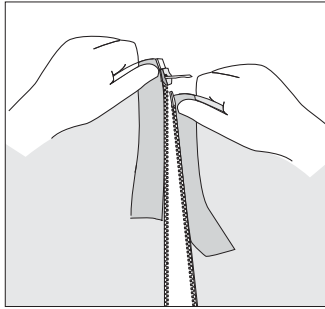


Step 7

Loop all straps around each leg of the tent Frame and secure to loop Velcro™ that is sewn to the Game Wall.

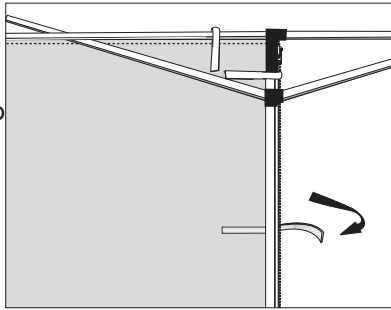


NOTE: straps fit best when velcro™ strips are aligned flush to one another.

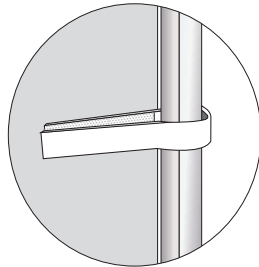


Step 6

With Game Wall secured at the top, you can now release and extend the telescoping legs to your desired height and lock the legs into place. Game Wall height is made to have the frame in the 3rd push button position. So the bottom of the Game Wall is almost to the floor.

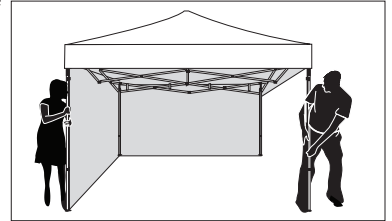

Step 8


Secure valance of existing canopy over the Game Wall. Loop Velcro™ on underside of valance will secure to Hook Velcro™ on Game Wall corners.

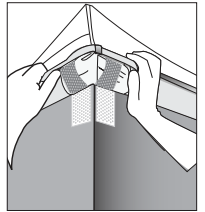

Step 9

Finish zipping all Walls.

Zip Game Wall from
top to bottom

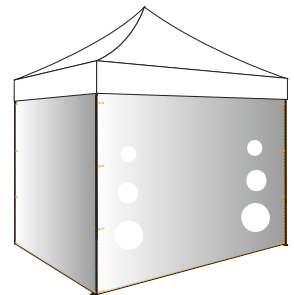

NOTE: Top 12" of Game Wall will be covered by Canopy Valance

Storage and Care

Remove Game Wall(s) from Frame and Store in a cool dry location.

Care Instructions: Spot Clean w/Mild Soap & Water, Air Dry Only

Do NOT Dry Clean / Do NOT Iron

**GAME WALLS ARE MADE TO VIEW IMPRINT WHILE
STANDING OUTSIDE OF TENT FRAME.**

**YOU CAN FLIP THE WALL TO VIEW THE IMPRINT WHILE
STANDING INSIDE OF TENT FRAME.**