


Product Parts

- 1 - Poles
- 2 - Hoop
- 3 - Backpack
- 4 - Graphic

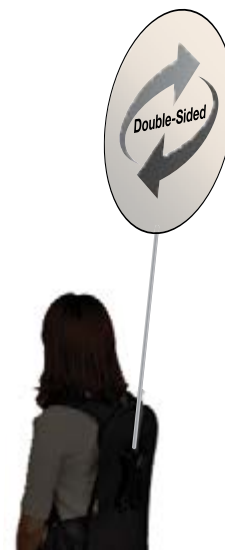


Set-up Instructions

Step 1

Remove all of the parts from package and set them, along with your graphics, on a flat, clean surface.


Step 3

Connect both poles together so that the push button pops back out through hole. Then thread top of pole through bolt on graphic hoop.

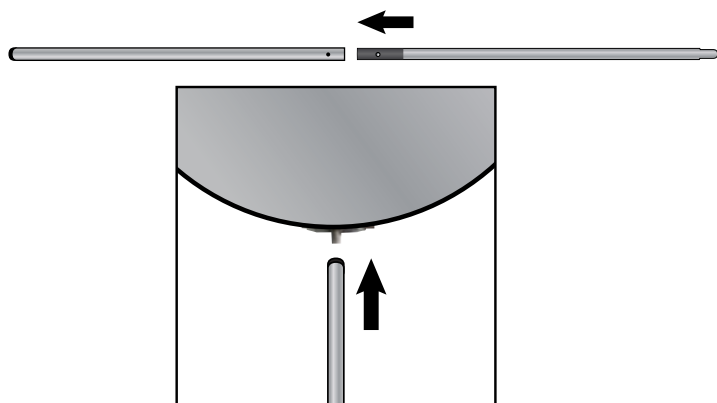

Step 2

Feed hoop in a counter clockwise direction through graphic opening. Push threaded bolt through female end to lock the circular shape.

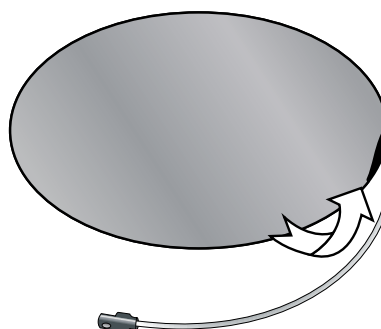

Step 4

Insert the base of pole (a) into the verticle slot on the back of the backpack.



Step 5

Secure backpack to your person.

Storage & Care

Place all product parts, as well as graphics, into the backpack. Clean backpack with damp cloth and wipe dry. Spot Clean graphics with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.