 


Outdoor Flex Sign with Ballast Base

Product Parts

- 1 - Frame
- 2 - Snap Edges
- 3 - Springs
- 4 - Base
- 5 - Threaded Holes
- 6 - Plug
- 7 - Snap Handle
- 8 - Wing Screw (x2)
- 9 - Washers (x2)
- 10 - Lock Nuts (x2)

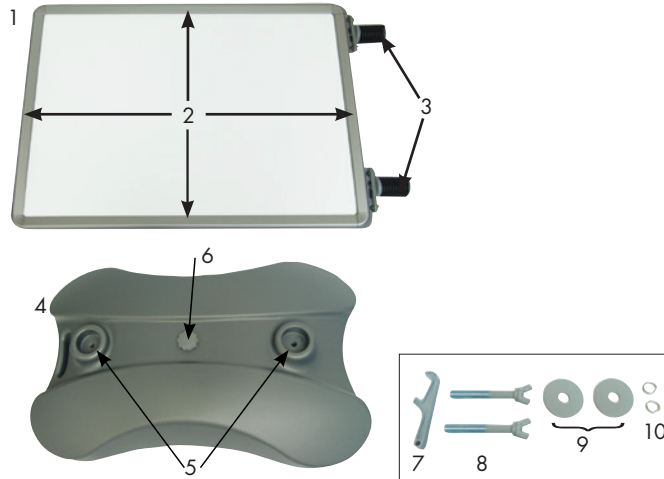

Display Set-Up

Step 1

Remove all parts from the box and remove all protective wrapping. Place on a clean, flat surface. Open all the Snap Edges (2) on one side of the Frame (1) by hand or you can use the optional Snap Handle (7). Remove the Protective Graphic Film and align it over the printed side of your graphic.




Step 2

Slide your Graphic covered by the Protective Graphic Film into the display's Frame (1) and close all Snap Edges (2). Flip the Frame (1) over and repeat on the second side.



Step 3

Place one Lock Nut (10) and one Metal Washer (9) on each Wing Screw (8). Stand the Frame (1) and the Base (4) on their sides with the Springs (3) inserted in the top side of the Threaded Holes (5) on the Base (4). Feed the Screws (8) through the bottom of the Threaded Holes (5), then tighten both Screws into the holes in the bottom of the Springs (3).

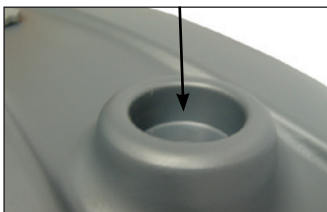

Step 4

Remove the Plug (6), and fill the Base (4) with either water or sand. Replace the Plug (6) when finished.

