


Backpack Sail Sign Single/Double Sided

Kit: Single Sided: 190120, Double Sided: 190922,
Graphic Only: Single Sided: 190921 Double Sided: 190923

Product Parts

- 1 - Sail Sign Rods
- 2 - Backpack
- 3 - Graphic

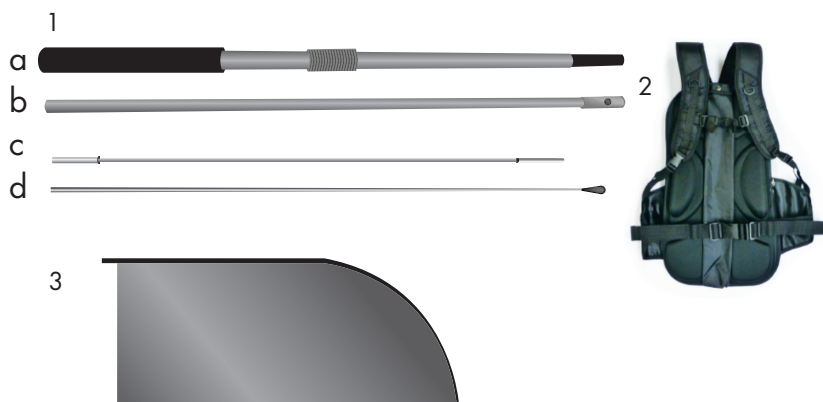

Set-up Instructions

Step 1


Remove all of the parts from package and set them, along with your graphics, on a flat, clean surface.

Step 2

Insert the Sail Sign Rods together: (a to b), (b to c), and (c to d).

Step 3

Slide the assembled pole through the sleeve of the graphic and attach the loop of the sleeve to the hook of the pole near the base.

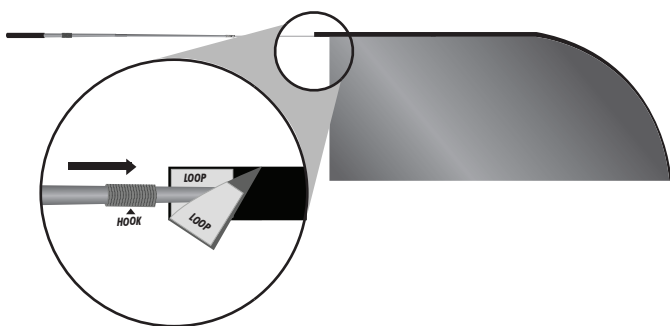

Step 4

Insert the base of pole (a) into the verticle slot on the back of the backpack.



Step 5

Secure backpack to your person.

Storage & Care

Place all product parts, as well as graphics, into the backpack. Clean backpack with damp cloth and wipe dry. Spot Clean graphics with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.