


Luxe Glo: Sign, Message Board, Edge

Product Parts

1. Imprinted Sign Frame
2. S-Hooks (x4)
3. Washers (x2)
4. Wall Anchors (x2)
5. Wall Screws (x2)
6. Chains (x2)
7. Power Supply

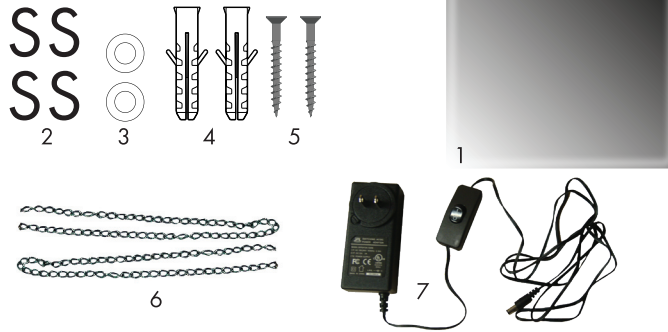


Display Set-Up

Note: Luxe is intended for wall mounting and ceiling suspension.

Wall Mounting

Position the Sign Frame (1) and mark for screws. Drill anchor holes into the wall at marked positions and insert Wall Anchors (4). Insert Wall Screws (5) into the Wall Anchors (4). Mount Sign Frame on protruding Wall Screws (4) using mounting brackets on the back of Sign Frame, plug Power Supply (7) into power outlet.

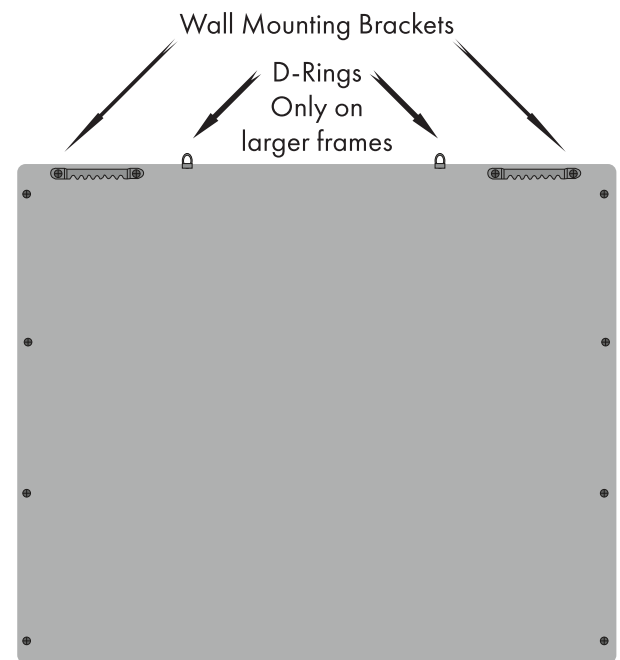

Back of Imprinted Sign Frame

Ceiling Suspension

Use S-Hooks (2) to attach the Chains (6) to the D-Rings on top middle of Sign Frame. *Note the smaller signs do not have the D-Rings. With the remaining S-Hooks (2) attach to the opposite end of Chains and hang from a secure ceiling mount. Once your Sign Frame is hung, plug Power Supply (7) into outlet.

Storage & Care

To clean hardware, wipe with damp cloth. Do Not use cleaning chemical solutions.