


# Standard SEG Glo Wall Mount

**Product Parts**


- 1 - Bottom Right (30x60 & 48x60 only)
- 2 - Bottom Left (30x60 & 48x60 only)
- 3 - Top Left (30x60 & 48x60 only)
- 4 - Top Right (30x60 & 48x60 only)
- 5 - Center Support Bar (30x60 & 48x60 only)
- 6 - Top
- 7 - Bottom (with cord hole)
- 8 - Side with cord hole
- 9 - Side (without cord hole)
- 10 - Wall Anchors and Screws (x4ea)
- 11 - Hanging Bracket (x2)
- 12 - Back Panel with Lights (number of light strips depends on frame size)
- 13 - Power Cord Adapter & Cord (22x28, 36x48, 30x60 & 48x60 only)
- 14 - Power Cord Adapter
- 15 - Graphic

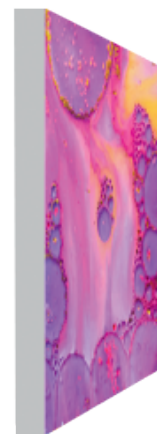

## Display Set-Up

### Step 1

Assemble Bottom (7)(with cord hole) to Side (8)(with cord hole) by firmly pressing together. Match numbered stickers.

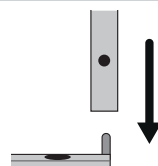


### Step 2

Assemble Side (9)(without cord hole) to Bottom (7). Press Top (6) firmly into assembled Sides (8 & 9). Match numbered stickers.

### Step 3

Graphic (15) installs on the beveled side of frame by inserting the Graphic's gasket edges into the frame, and inserting each corner into the frames four corners, then work around the frame alternating opposite sides until complete. Loop for removing Graphic (15) will be at bottom corner.

 
Insert stitched side of the gasket first



To remove the graphic, pull the loop found on the corner.  
To remove the Back Panel, pull the white tab at the bottom.

### Step 4

The Back Panel with Lights (12) installs on the flat side of the frame into the SEG channel. Back Panel has a gasket edge just like the printed Graphic (15) and installs in the same manner. Lights will face inward when installed. Channel is offset to allow for Hanging Brackets (11).

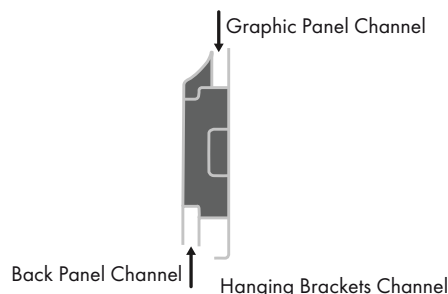

## Display Set-Up for 22" x 28", 36" x 48", 30" x 60" & 48" x 60"

### Step 1


In the same manner as above assemble Bottom (7)(with cord hole) to Side (1)(with cord hole) and continue by matching numbered stickers.

### Step 2

Press Center Support Bar (5) into provided slots by pressing with equal pressure on both sides. Remove by pulling equally on both sides to prevent breaking.

### Step 3

Product can be displayed in horizontal or vertical position by inserting both Hanging Brackets (11) anywhere along the Hanging Bracket Channel. Cord connected to Back Panel with Lights (12) can be fished through either cord hole. Connect to Power Cord Adapter & Cord (13) for 22" x 28", 36" x 48", 30" x 60" & 48" x 60" and Power Cord Adapter (14) for other Four sizes.

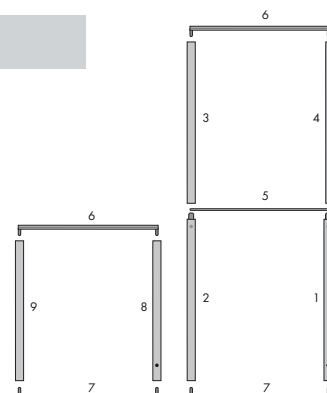

## Storage & Care

Store in a cool, dry place. To clean hardware, wipe with a damp cloth.  
Do NOT dry clean graphic, can Steam Clean wrinkles.