


FULL TENT WALLS

for Standard, Deluxe, Premium, Economy, Omni & Elite Frames

Product Parts

1 - Full Tent Wall

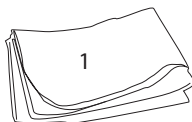

NOTE:

All Full Tent Walls are designed with zippers on the vertical ends so they can be zipped together.


10ft Full Tent Walls fit any 10ft Standard, Deluxe, Premium, Economy or Elite Tent Frame. (Fits the 10ft side of 10x15 and 10x20 Premium Frames).

5ft Full Tent Walls fit the 5x5 Economy Tent Frame.

6ft Full Tent Walls fit the 6x6 Deluxe Tent Frame.

8ft Full Tent Walls fit the 8x8 Deluxe Tent Frame.

5ft Full Tent Walls fit the 10x15 Premium Frame.

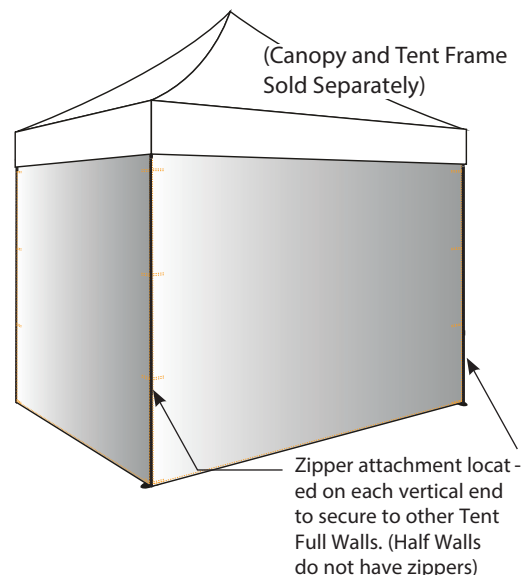


Set-Up

Step 1


Before you begin, have your existing Tent Frame legs in their lowest position.

NOTE: Full Tent Wall(s) are easiest installed with two people.

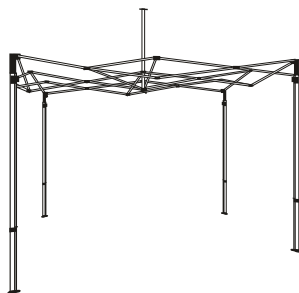


Step 3

Secure loop on corner of Full Tent Wall to hook located on Tent Frame. Repeat for opposite corner.

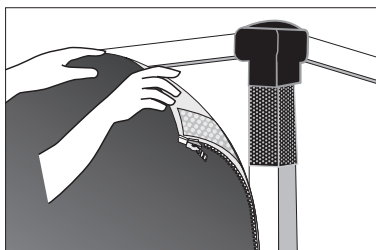

NOTE:


(if canopy is in position, it will need to be pulled up at the corners to expose the hook on the frame)

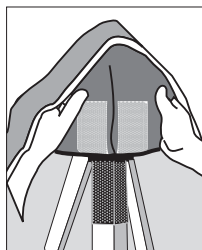

Step 2


Verify the front of the Full Tent Wall.

NOTE: Full Tent Walls are imprinted with the front as viewed when standing outside the tent frame. The zipper pull will always be on the right hand side when viewing from outside the tent frame.

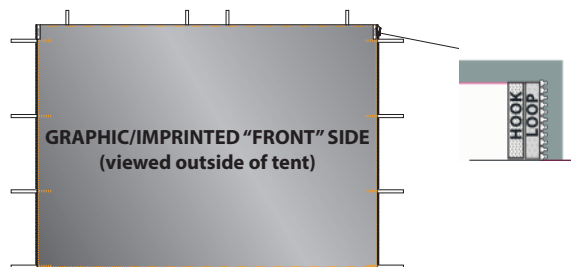

Step 4


Loop all straps around the top of the tent Frame and secure to loop that is sewn to the Full Tent Wall. You may need to double wrap the strap before securing.

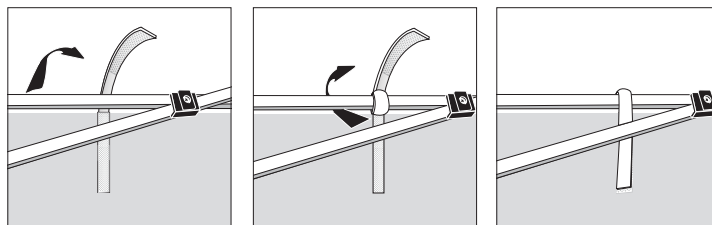

Set-Up Continued...


Step 5

For more than one Full Tent Wall: Attach together by zipping from top to bottom. Since the tent frame is not yet extended to its full height, zip only half way down to secure.

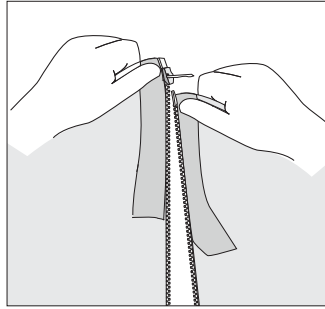


Step 7

Loop all straps around each leg of the tent Frame and secure to loop that is sewn to the Full Tent Wall.

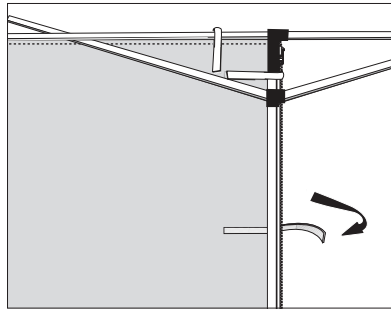


NOTE: Straps fit best when aligned flush to one another.

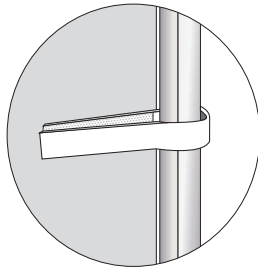


Step 6

With Full Tent Wall secured at the top, you can now release and extend the telescoping legs to your desired height and lock the legs into place. Full Tent Wall height is made to have the frame in the 3rd push button position. So the bottom of the Full Tent Wall is almost to the floor.

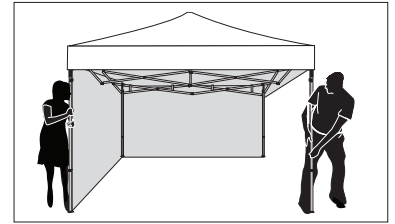

Step 8


Secure valance of existing canopy over the Full Tent Wall. Loop on underside of valance will secure to Hook on Full Tent Wall corners.

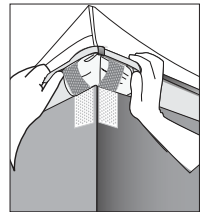

Step 9

Finish zipping all Full Tent Walls.

Zip Full Tent Wall
from top to bottom

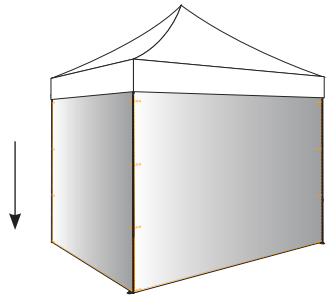

NOTE: Top 12" of Full Tent Wall will be covered by Canopy Valance

Storage and Care

Remove Full Tent Wall(s) from Frame and Store in a cool dry location.

Care Instructions: Spot Clean w/Mild Soap & Water, Air Dry Only

Do NOT Dry Clean / Do NOT Iron

FULL TENT WALLS ARE MADE TO VIEW IMPRINT WHILE
STANDING OUTSIDE OF TENT FRAME.

YOU CAN FLIP THE WALL TO VIEW THE IMPRINT
WHILE STANDING INSIDE OF TENT FRAME.

Note: if you flip one wall, you will have to flip all walls in order to zip
together at corners.