


3'x3' Journey Enclosure

Product Parts


1. Bottom Folding Section
2. Top Folding Section
3. Center Support Bars
4. Top Door Connector
5. Bottom Door Connector
6. 90° Corner Connectors (A & B) (x8)
7. Middle Section (x6)
8. Middle Section with Lock
9. Middle Section with Latch
10. Top Corner Support Bar (x2)
11. Interior Unimprinted Panel (x4)
12. Exterior Graphic (x4)

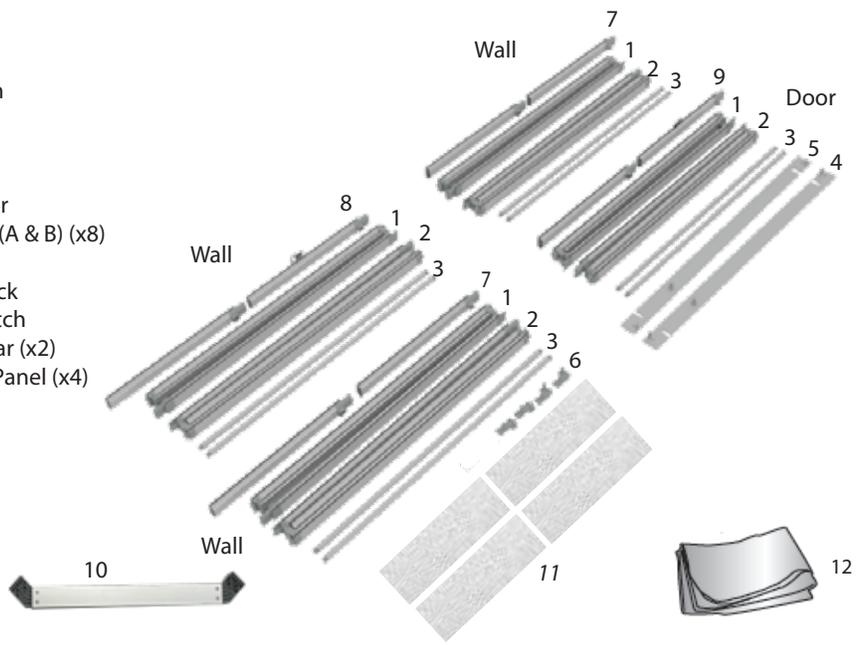

Display Set-up


Step 1

Setup the frame for each wall & door by connecting the Bottom Folding Section (1) and Middle Section (7) for the back and right wall, Middle Section with Lock (8) for the left wall, and Middle Section with Latch (9) for the Door. Then attach Top Folding Section (2) and Center Supports Bars (3).

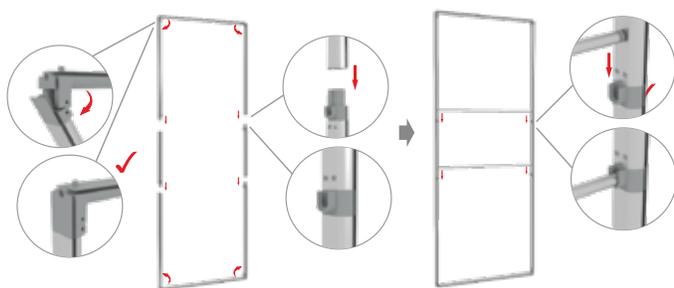

Step 2


Install Interior Unimprinted Panels (11) and Exterior Graphic (12) for all walls and door. See graphic installation process for details.

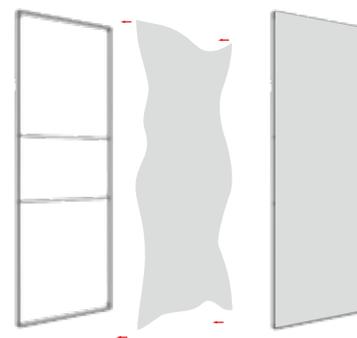

Step 3

Create the enclosure by connecting the 90° Corner Connector (6) to back wall at the top and bottom corners.

Once Corner Connectors (6) are connected to back wall, install side walls by connecting them to the Corner Connectors on back wall.

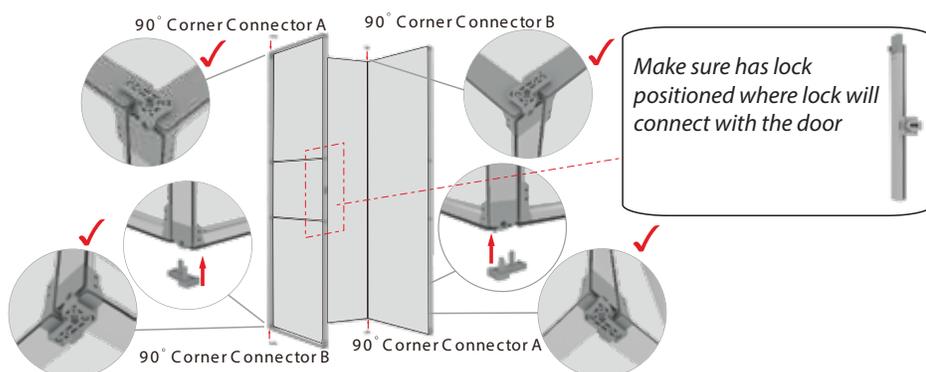

Correctly Setting up the 90° Corner Connectors (6) and wall placement is essential for proper enclosure setup.



Make sure that the Sidewalls are on the side of the backwall (Not in front of).

See Below for proper configuration.



Short side 90° connector will have long side facing in and short side facing out.

Long side

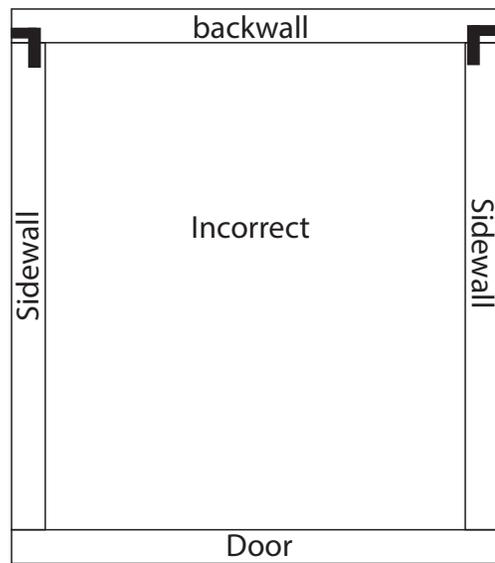
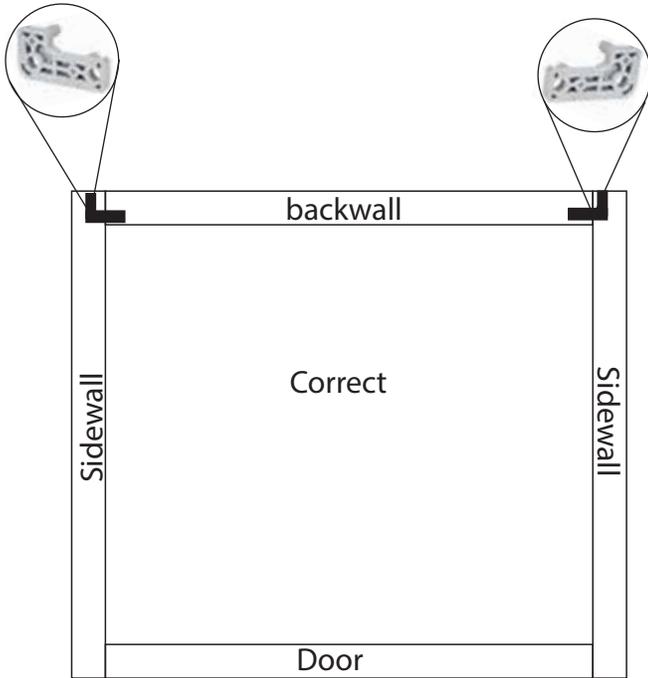


Step 4

Attach 45° Top Corner Support Bars (10) to the top back corners.

Step 5


Attach Bottom Door Connector (5) to walls by sliding the pegs on either side of the Door Connector (5) into the holes in the bottom of the Bottom Folding Section (1) on side walls.

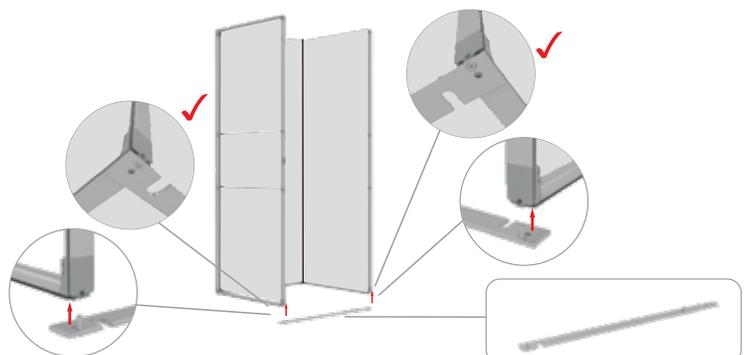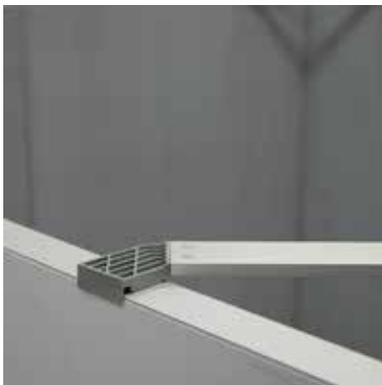

The notch in the Bottom Door Connector (5) should be facing out on the left side and facing in on the right side.


Step 6

Slide the assembled door between side walls, sliding the hole in the door Bottom Folding Section (1) into the remaining peg on the Bottom Door Connector (5).

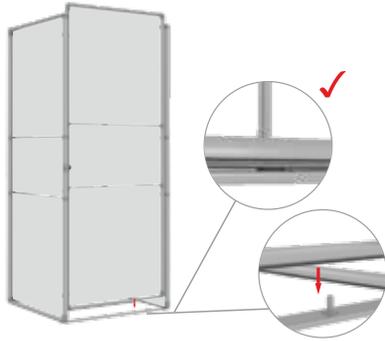

Step 7

Attach Top Door Connector (4) to side walls at the corners by sliding the pegs on either side of the Top Door Connector (4) into the holes at the Top Folding Section of the side walls, and the remaining peg connecting to the Door.

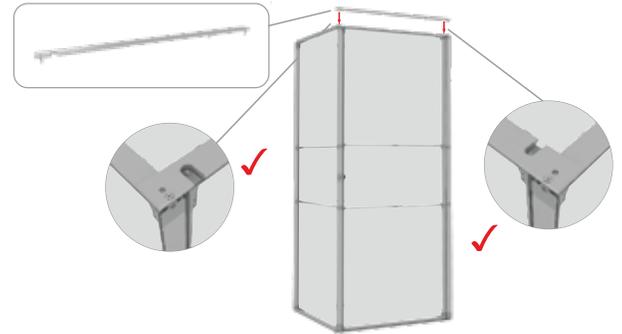


Step 8

Changing the Password

Initial Password for lock: 000


To change lock password, insert a pin in the hole at the bottom of the lock. While pin is inserted in this hole change code to desired combination.

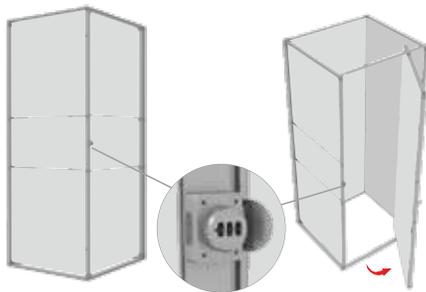

Graphic Installation Process


Step 1

Start with the corners. Working in a clockwise motion insert each corner of the graphic into the frame.

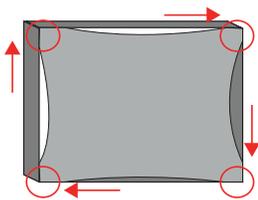


Step 2

Move to the centers. Insert the centers of the graphic on each side of the frame.

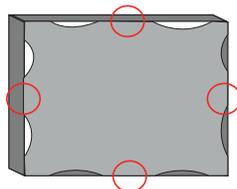

Step 3

Complete installation. Insert the remaining portions of the graphic into the frame starting from the center points and working your way to the corners.

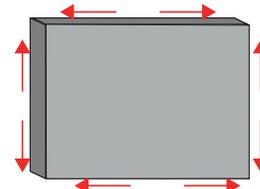

Storage & Care

Place all product parts into Carry Case and store in a cool dry location. To clean non-graphic hardware, wipe with a damp cloth.