

9'x10' Journey Enclosure


Product Parts

Wall & Door Parts

	3ft Wall	5ft Wall	Door
1. Bottom Folding Section	x5	x4	x1
2. Top Folding Section	x5	x4	x1
3. Center Support Bars	x10	x4	x2
4. Top Door Connector	-	-	x1
5. Bottom Door Connector	-	-	x1
6. Middle Section	x9	x8	x1
7. Middle Section with Lock	x1	-	-
8. Middle Section with Latch	-	-	x1

Enclosure Parts

- 9. 90° Corner Connectors (A & B) (x8)
- 10. 180° Wall Connector (x6)
- 11. Top Corner Support Bar (x4)
- 12. Interior Unimprinted Panel (x6)
- 13. Exterior Graphic (x6)

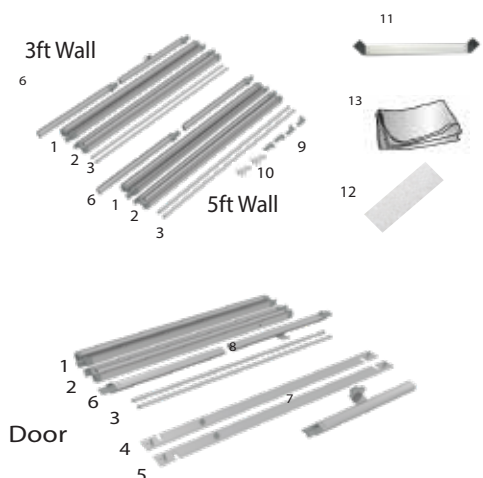


Display Set-up

Step 1

Setup the frame for each wall by connecting the Bottom Folding Section (1), Middle Section (6), and Top Folding Section (2).


For 3' wall that will be used next to door use one Middle Section and then the Middle Section with Lock (7) for opposite Side. For the door use the Middle Section with latch (8).

Attach Center Support Bars (3) using two for the 3' walls & door and one each for the 5' walls Repeat until all 3 walls and door are formed.

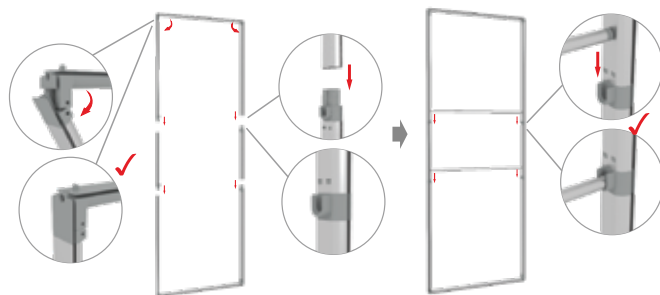

Step 2

Install Interior Unimprinted Panels (12) and Exterior Graphics (13) for all walls and door. See graphic assembly for details.

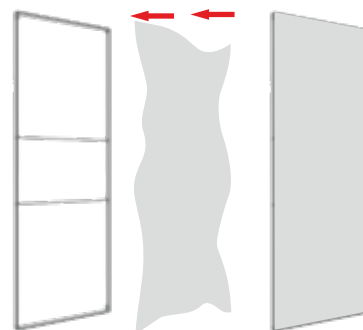

Step 3

Create the Enclosure by using the 90° Connectors at the corners and 180° Connectors for back wall. Attach 180° & 90° Connectors by sliding the peg on the connector into the hole in each Top Folding Section (2) and Bottom Folding Section (1).

The back wall consists of three 3' walls with two of the 5' walls as the side walls. The front consists of two 3' walls on the corners with the door in the middle.

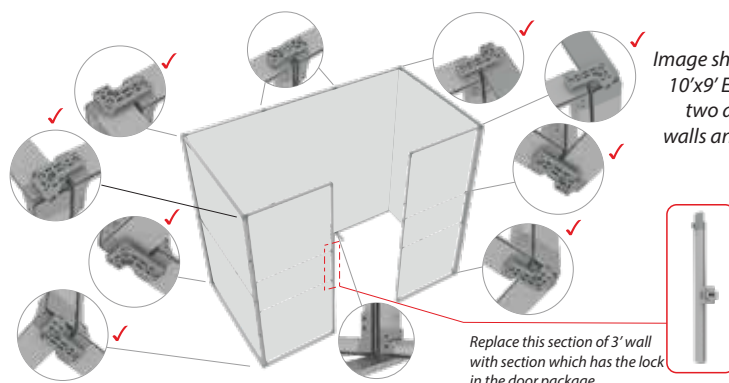


Image shows 5'x9' Enclosure. 10'x9' Enclosure will have two additional 5' Side walls and 180° Connectors.

Replace this section of 3' wall with section which has the lock in the door package

Correctly Setting up the 90° Corner Connectors (6) and wall placement is essential for proper enclosure setup.





Make sure that the Sidewalls are on the side of the backwall (Not in front of).

See Below for proper configuration.




Short side 90° connector will have long side facing in and short side facing out.

Long side

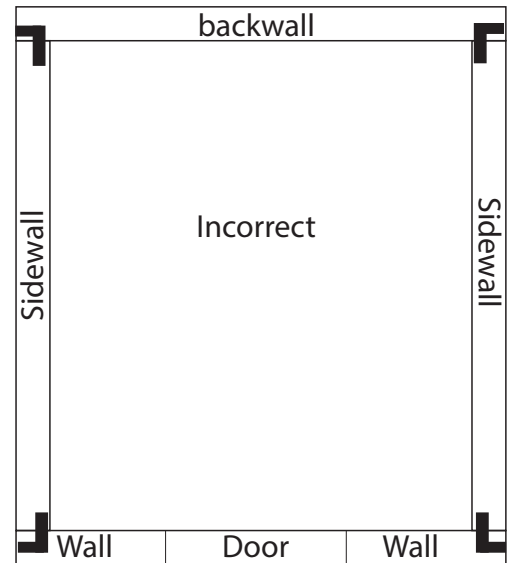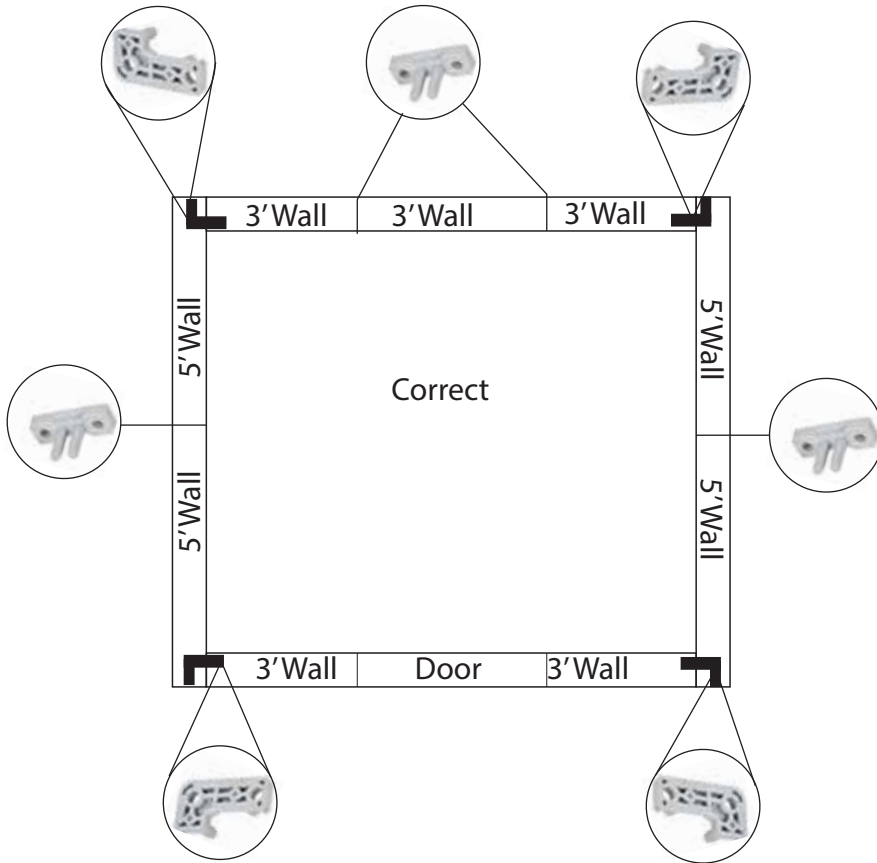


Step 4

Attach 45° Top Corner Support Bars to each corner.

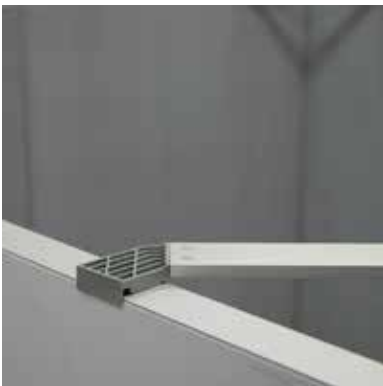


Step 5

Begin assembling door by attaching the Bottom Door Connector (5) between the two 3' walls by sliding the pegs in the Connector into the holes in the Bottom Folding Section (1) hardware.

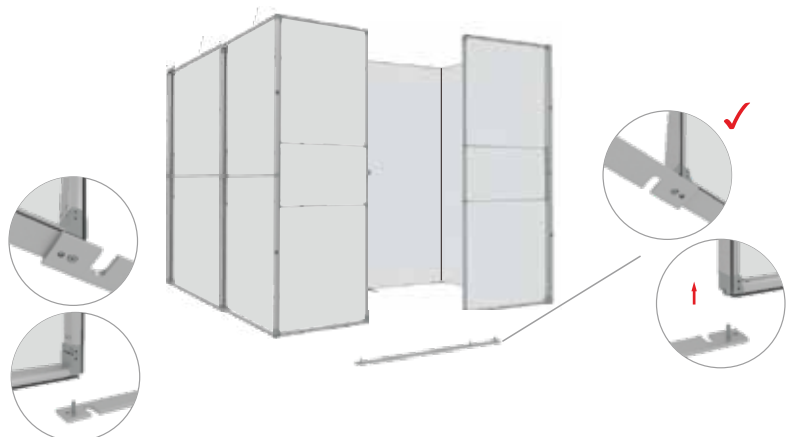


Step 6

Slide the door down between the walls and attach Bottom Folding Section (1) of the door frame to the Bottom Door Connectors (5) remaining peg.

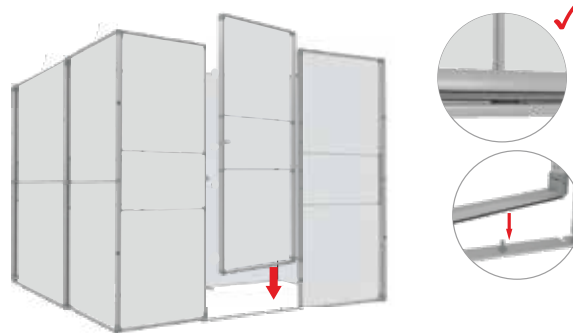

Step 7

Attach the Top Door Connector (4) to the side walls, sliding the pegs in the Top Door Connector (4) into the holes in the Top Folding Section (2) of the 3' walls on either side and the remaining peg into the door Top Folding Section (2)

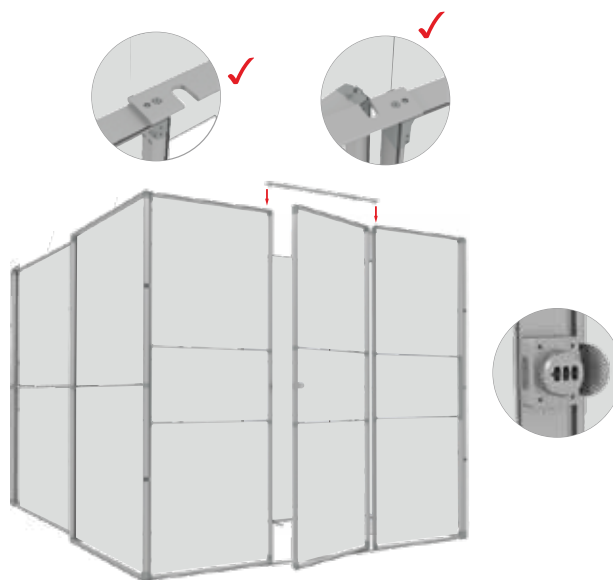

Step 8

Changing the Password


Initial Password for lock: 000

To change lock password insert a pin in the hole at the bottom of the lock. While pin is inserted in this hole change code to desired combination.

Graphic Installation Process


Step 1

Start with the corners. Working in a clockwise motion insert each corner of the graphic into the frame.

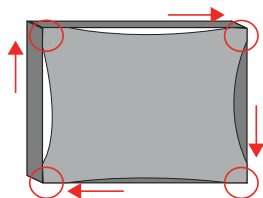


Step 2

Move to the centers. Insert the centers of the graphic on each side of the frame.

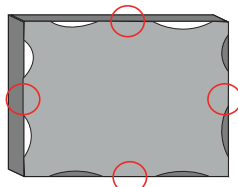

Step 3

Complete installation. Insert the remaining portions of the graphic into the frame starting from the center points and working your way to the corners.

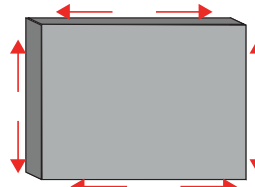

Storage & Care

Place all product parts into Carry Case and store in a cool dry location. To clean non-graphic hardware, wipe with a damp cloth.