
EuroFit Wheeled Feet (Pair)

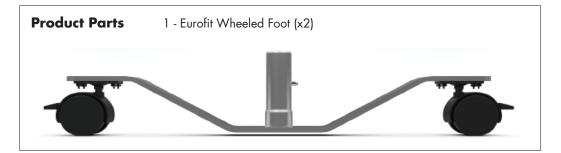

Display Set-Up

Step 1


If there's a graphic on the frame, carefully pull it up from the bottom to expose the connection between any existing feet and the bottom of the frame.


Step 2

Carefully unattach any stationary feet one at a time by pressing in the push button, setting the frame sideways on a clean surface if needed.

Step 3

Insert the wheeled foot into the bottom of the side pole until the push button snaps in place.

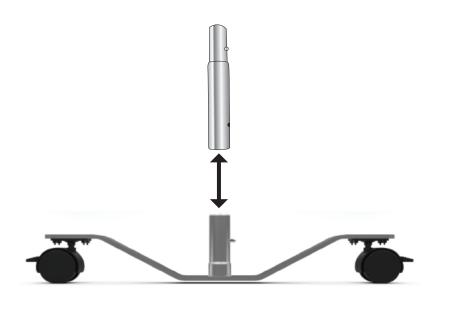

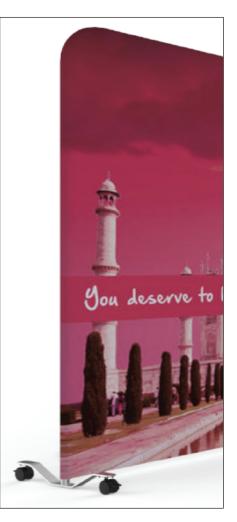

Storage and care

Store in a cool, dry place. To clean, wipe with a damp cloth.