
EuroFit Wall Shelves



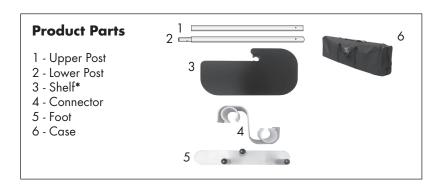

*Shelf shown is Left Facing.

Display Set-Up

Step 1


Place on a clean flat surface. Verify you have all parts described above. Assemble Upper Post (1) to Lower Post (2).

Step 3

Attach assembled poles to post connection that is the most forward facing on the Foot (5).


Step 2

Remove one foot on existing frame and attach to post connection that is in the center of Foot (5).




Step 4

Loosen clamp on bottom of Shelf* (3) and place around existing frame, slide down to rest on top of Upper Post (1). Tighten clamp to hold in place.

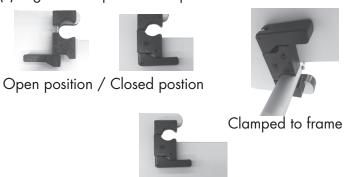

Step 5

If you are using a second frame use the Connector (4) to link the two together. The frames will not align because of the feet, they will be offset which will allow the connector to link frames and is designed to fit onto frame over the fabric.

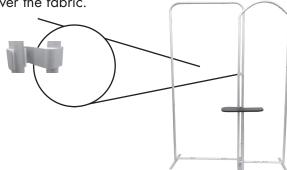

Storage

Top of Upper Post (1)

rests here.

Place all product parts into Soft Carry Case and store in a cool dry location.