
# Superstrong A-Frame 24"x 36" & 24"x 18"

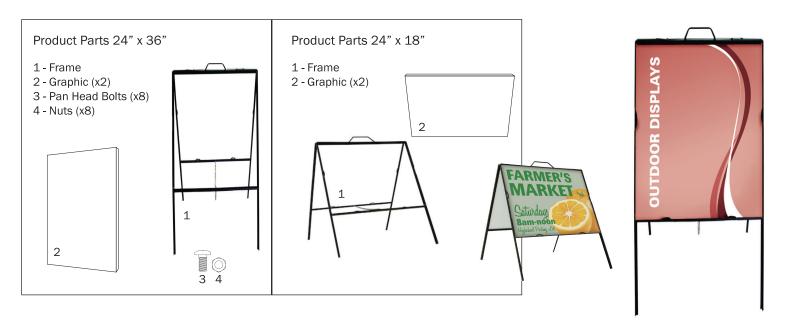

# Sign Install and Display Set-Up

### Step 1

Carry the A-Frame (1) to the desired location. Separate the front and back segments of the A-Frame (1) until the Chain (3) is taut.



### Step 2

Insert the primary graphic into the frame and with one hand holding the frame and graphic - place holes in your graphic at the attachment eyelets with a drill (not included).



NOTE: 24" X 18" requires no hardware, simply place graphic behind graphic edge tab.



#### Step 3

Attach graphic to the frame by first inserting a Pan Head Bolt (3) through Frame (1) then through Graphic (2). Secure in place by tightening Nut (4) against backside of graphic.



## Storage

Store in a cool dry location.

#### Care

To clean, wipe with damp cloth.